 
 

REPLACING THE TONER CARTRIDGES

Be sure to replace the toner cartridge when the message "Change the toner cartridge." appears. The black toner cartridge can be replaced while the machine is in operation.


In copy mode



When the message appears in the message display, replace the toner cartridge for the indicated colour.



If you continue to use the machine without replacing the cartridge, the following message will appear when the toner runs out.

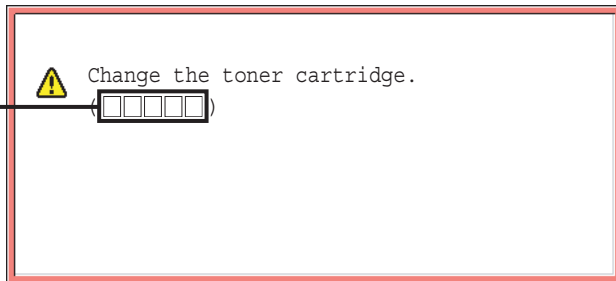

Colours that are running low or have run out of toner are indicated in (□□□□□).

[Y]: Yellow toner, [M]: Magenta toner, [C]: Cyan toner,


[Bk1], [Bk2]: Black toner

Replace the toner cartridges of the indicated colours.



- If any one of the toner colours runs out (including black toner), colour printing will not be possible. If Y, M, or C toner runs out but Bk toner remains, black and white printing will still be possible.
- Be sure to install 5 toner cartridges (Y/M/C/Bk1/Bk2).


1

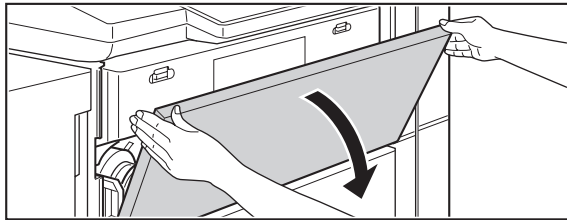

Open the front cover (upper).

Locations of colour toner cartridges


(A) (B) (C) (D) (E)

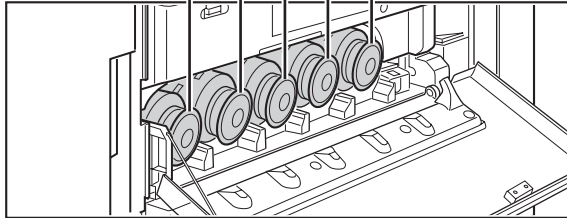


(A): Yellow (B): Magenta (C): Cyan
(D): Black 1 (E): Black 2



If a finisher / saddle stitch finisher is not installed, open the toner cover as shown.

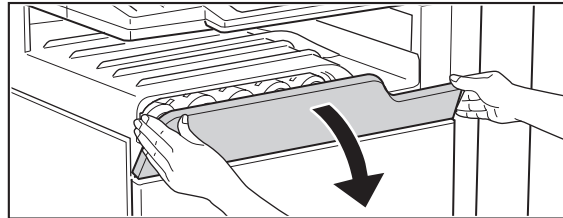

2

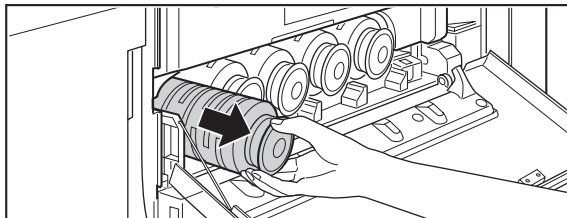


Pull the toner cartridge toward you.


Pull the cartridge slowly toward you, keeping it level.
If the cartridge is pulled out abruptly, toner may spill out.

⚠ Caution

When pulling out the toner cartridge, do not touch the toner fill hole.

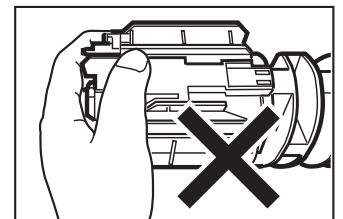


3

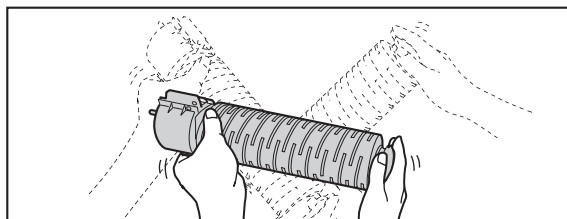

Remove a new toner cartridge and shake it 5 or 6 times as shown.

4

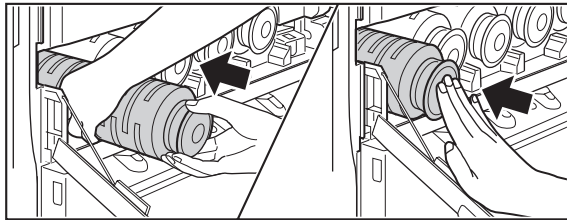


Insert the new toner cartridge horizontally, pushing it in until it locks.



A toner cartridge of a different colour cannot be installed. Be sure to install a toner cartridge of the same colour.


5

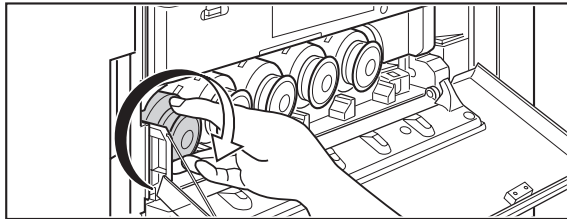

Rotate the toner cartridge clockwise one turn.

Even if you replaced the black toner cartridge while the machine is in operation, rotate the toner cartridge one turn clockwise.

6

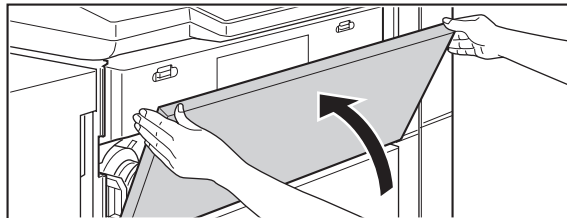

Close the front cover (upper).

After the toner cartridge is replaced, the machine automatically enters image adjustment mode. Do not open the front cover (upper) during this time.

Caution

- Do not throw a toner cartridge into a fire. Toner may fly and cause burns.
- Store toner cartridges out of the reach of small children.
- If a toner cartridge is stored on end, the toner may harden and become unusable. Always store toner cartridges on their side.
- If a toner cartridge other than a SHARP-recommended toner cartridge is used, the machine may not attain full quality and performance and there is a risk of damage to the machine. Be sure to use a SHARP-recommended toner cartridge.



- Keep the used toner cartridge in a plastic bag (do not discard it). Your service technician will collect the used toner cartridge.
- To view the approximate amount of toner remaining, continually touch the [COPY] key during printing or when the machine is idle. The percentage of toner remaining will appear in the display while the key is touched. When the percentage falls to "25-0%", obtain a new toner cartridge and keep it ready for replacement.
- Depending on your conditions of use, the colour may become faint or the image blurred.