

SHARP®

MODEL

BD-AMS10A

BLU-RAY DISC/DVD PLAYER

OPERATION MANUAL



AQUOS LINK



x.v.Colour

Introduction

SAFETY / IMPORTANT INFORMATION

WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.


TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, AND ANNOYING INTERFERENCE, USE THE RECOMMENDED ACCESSORIES ONLY.

CAUTION:

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

AS THE LASER BEAM USED IN THIS PLAYER IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

- This player is classified as a CLASS 1 LASER product.
- The CLASS 1 LASER PRODUCT label is located on the rear cover.
- This product contains a low power laser device. To ensure continued safety do not remove any cover or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

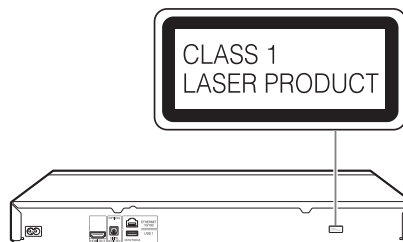

Note:

This player can be used only where the power supply is AC 100–240V, 50/60Hz. It cannot be used elsewhere.

Power Cord Protection

To avoid any malfunctions of the player, and to protect against electric shock, fire or personal injury, please observe the following.

- Hold the plug firmly when connecting or disconnecting the AC power cord.
- Keep the AC power cord away from heating appliances.
- Never put any heavy object on the AC power cord.
- Do not attempt to repair or reconstruct the AC power cord in any way.

IMPORTANT SAFETY INSTRUCTIONS

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and/or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your Blu-ray Disc/DVD Player, please read the following precautions carefully before using the product.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10) Only use attachments/accessories specified by the manufacturer.
- 11) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

 
 


Additional Safety Information

- 14) **Power Sources**—This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 15) **Overloading**—Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 16) **Object and Liquid Entry**—Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 17) **Damage Requiring Service**—Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the AC cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions.
Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
- 18) **Replacement Parts**—When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorised substitutions may result in fire, electric shock, or other hazards.
- 19) **Safety Check**—Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 20) The main AC plug is used as disconnect device and shall always remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

- **Water and Moisture**—Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- **Stand**—Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product.
- **Selecting the location**—Select a place with no direct sunlight and good ventilation.
- **Ventilation**—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.



- **Heat**—The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- **Lightning**—For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.
- To prevent fire, never place any type of candle or flames on the top or near the product.
- To prevent fire or shock hazard, do not expose this product to dripping or splashing. No objects filled with liquids, such as vases, should be placed on the product.
- To prevent fire or shock hazard, do not place the AC cord under the product or other heavy items.



PRECAUTIONS

Precautions on viewing stereoscopic 3D images

- Do not view stereoscopic 3D images if you have a history of photosensitivity, heart disease or poor health. This may cause the symptoms to worsen.
- If you experience any health problems such as fatigue and discomfort while viewing stereoscopic 3D images, immediately discontinue viewing. Continuing viewing after symptoms appear may cause health risks. Take a break until the symptoms have completely disappeared.
- Ages of 5–6 or over are recommended for viewing stereoscopic 3D images. Symptoms such as fatigue and discomfort are difficult to determine in young children, therefore they may suddenly become ill. When viewing 3D images with children, please watch for eye strain symptoms.
- When viewing stereoscopic 3D images, take a moderate break after watching one title. Viewing for extended periods may cause visual strain.

Precautions when cleaning this product

- Turn off the main power and unplug the AC cord from the wall outlet before handling.
- To clean the outer cabinet, periodically wipe it with a soft cloth (cotton, flannel, etc.).
- For severe dirt, soak a soft cloth (cotton, flannel, etc.) in some neutral detergent diluted with water, wring the cloth out thoroughly, wipe off the dirt, then wipe again with a soft, dry cloth.
- Do not use chemicals or a chemically treated cloth for cleaning. It may damage the cabinet finish.





DEAR SHARP CUSTOMER

Thank you for your purchase of the SHARP Blu-ray Disc/DVD Player. To ensure safety and many years of trouble-free operation of your product, please read the Important Safety Instructions carefully before using this product.

Getting Started

Step 1: Unpacking

Make sure the following accessories are provided with the product.

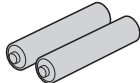Remote control unit	AC cord
	
Pages 15 and 19	Page 20
"AA" size battery (×2)	HDMI cable
	
Page 20	Pages 16 and 17

Step 2: Selecting equipment to connect

Connection varies with the equipment used. Refer to Connection (Pages 16–19).

Turn off the devices before connecting.

Enjoying BD-LIVE and video on demand services (e-Contents)

To enjoy BD-LIVE content or video on demand streaming content on your TV, after an Internet connection is made, communication setup is required. Refer to "Communication Setup" (Pages 48–49).

Step 3: Playing back video/picture/music content

Play back video, picture or music content from the desired media source such as Blu-ray and DVD discs, or via the Internet.

Refer to Playback (Pages 20–41) and video on demand streaming content (Page 55).

Step 4: Adjust settings to suit your preference

Adjust settings to enjoy various features and other functions for playing discs/content.

Refer to Settings (Pages 42–54).

Contents

Introduction

SAFETY / IMPORTANT INFORMATION	1
IMPORTANT SAFETY INSTRUCTIONS	2
PRECAUTIONS	4
DEAR SHARP CUSTOMER	5
Getting Started	5
Contents	6
What Would You Like to Do with This Player?	8
About Media Types	9
Blu-ray Disc.....	9
Types of Discs/Media Formats that Can Be Used with This Player.....	9
Discs that Cannot Be Used with This Player.....	10
About Disc Contents.....	11
BD Video.....	11
Title, Chapter and Track.....	12
Icons Used on BD/DVD Video Disc Cases.....	12
The Icons Used in This Operation Manual.....	12
Important Information	13
Disc Precautions.....	13
License and Copyright.....	13
Major Components	14
Main Unit (Front).....	14
Main Unit (Rear).....	14
Remote Control Unit.....	15
Keylock Function.....	15

Connection

Connecting to a TV/Projector	16
Connecting to an Amplifier/AV Receiver	17
HDMI Connection.....	17
Digital Audio Connection.....	17
Connecting to a USB Device	18
Broadband Internet Connection	19
Wired Connection (LAN Cable).....	19

Playback

Before Starting Playback	20
Loading the Batteries in the Remote Control.....	20
Approximate Operating Range of Remote Control.....	20
Connecting the Power Cord.....	20
Turning the Power On.....	21
Turning the Power On.....	21
Entering Standby.....	21
Indicators on the Player.....	21
About the Home Screen.....	21
Language Setting.....	22

Operating a SHARP TV Using the Remote Control.....	22
Turning Off or Dimming the LED Light and Indications.....	22
Using AQUOS LINK.....	23
Using 3D.....	23
Control Panel.....	24
Video/Picture/Music Playback	25
Loading a Disc.....	25
BD/DVD Video Playback.....	25
Displaying the Disc Information.....	26
BD/DVD Menus.....	26
Start Playback by Selecting a Title from the Top Menu.....	26
Using the Disc Menu.....	26
Using the Pop-Up Menu.....	27
Enjoying BONUSVIEW or BD-LIVE.....	27
Use of Picture in Picture Function (Secondary Audio/Video Playback).....	28
Virtual Package.....	28
BD-LIVE.....	28
DVD-R/-RW (VR format) / BD-RE/-R (BD-RE format) Playback.....	29
Playback by Selecting a Title.....	29
Playback by Selecting a Chapter.....	30
Sorting the Titles.....	30
Playback by Selecting a Playlist.....	30
Playback from the Beginning or Resume Playback.....	30
Playback using a USB Device.....	31
Searching/Sorting the Titles.....	31
Selecting/Deleting Files.....	32
Copying Files/Folders.....	32
Audio CD Playback.....	33
Playback from the Beginning.....	33
Playback by Selecting a Track.....	33
Operation Procedure for the "Functions" Menu.....	33
Audio Data (MP3 File) Playback.....	34
Displaying Still Images (JPEG Files).....	35
Accessing DLNA Servers.....	36
Playback by Selecting a File List.....	36
Playback Functions	37
Fast Forward/Reverse (Search).....	37
Skipping to the Next or the Start of the Current Chapter (Track/Title).....	37
Pause/Frame Advance Playback.....	37
Slow Playback (Forward/Reverse).....	37
Repeat Playback of a Title or Chapter (Repeat Playback).....	38
Partial Repeat Playback (Repeat Playback of a Specified Part).....	38
Displaying the Audio Information.....	39
Switching Subtitles.....	39
Switching the Angle.....	39
Displaying the Angle Mark.....	39
Settings During Playback	40
Function Control.....	40
Function Control Operation Procedure.....	40
Functions which Can Be Set.....	41

Contents

Settings

SETTINGS	42
Common Operations	42
Basic Operation for Playback Setting	43
Audio Video Settings	44
Smart Settings	45
Playback Setting	46
System	47
Communication Setup	48
The Operation Procedure for Inputting Characters Manually	49
USB (HDD/Memory) Management	50
Software Update Settings	51
Auto Update from Network	51
Manual Update from Network	52
Manual Update from USB Memory Device	53

Streaming content

Playing Back Video On Demand Streaming Content	55
Playing Back YouTube Content	55

Appendix

Troubleshooting	56
To Reset this Player	59
On-screen Error Messages	59
List of File Formats Compatible with USB Mode	60
Specifications	61
Glossary	62
Network Service Disclaimer	65
About Software License	66

What to do first:

Refer to “Getting Started” (page 5) to prepare for using this player.

Introduction (pages 1–15)

Explains the important operation information.

Connection (pages 16–19)

Shows the connecting options provided by this player.

Playback (pages 20–41)

Shows simple playback and useful functions.

Settings (pages 42–54)

Gives you more options to suit your circumstances.

Streaming content (page 55)

Shows the Internet streaming services available with this player.

Appendix (pages 56–66)

Provides troubleshooting tips and more information.

The illustrations and on-screen displays in this operation manual are for explanation purposes and may vary slightly from the actual operations.

What Would You Like to Do with This Player?

Watch high quality movies on Blu-ray discs

This player offers full high-definition Blu-ray disc playback.

Video/Picture/Music Playback (page 25)

Enjoy stereoscopic and powerful 3D images

This player can play 3D content from 3D compatible Blu-ray discs through an HDMI cable. To watch 3D images, connect a 3D compatible TV to this player using an HDMI cable and play the 3D content while wearing 3D glasses.

Using 3D (page 23)

Enjoy different kinds of media sources

Use this player to enjoy video, picture or music content from various types of media sources such as DVDs, USB devices and via the Internet.

About Media Types (pages 9–12)

Video/Picture/Music Playback (page 25)

Simple connection and operation through HDMI

This player is equipped with an HDMI terminal. You can connect it to the TV using HDMI and no other cable will be needed to enjoy movies. If your TV is compatible with AQUOS LINK, you can control both the TV and this player with simple operations.

Connecting to a TV/Projector (page 16)

Enjoy BD-LIVE functions through the Internet

This player is compatible with BD-LIVE. You can enjoy bonus content such as movie trailers through the Internet when playing back BD-Video discs compatible with BD-LIVE.

Enjoying BONUSVIEW or BD-LIVE (pages 27–28)

Access to videos, pictures and music from home network servers

This player can play back video, picture and music data stored on your home network servers such as a DLNA certified PC.

Accessing DLNA servers (page 36)

Enjoy video on demand streaming content with higher image quality on your TV

This player supports video on demand streaming services using the Internet. By connecting this player to the Internet, you can enjoy various content streamed on your TV. Also, with this player's "Super Picture" function, you can enjoy video streaming images with higher image quality.

Playing Back Video On Demand Streaming Content (page 55)
SUPER PICTURE (page 45)

About Media Types






Blu-ray Disc

Blu-ray Disc is the ultimate next generation optical media format, offering the following key features:

- Largest capacity (25 GB single layer – 50 GB dual layer) – with over 5 times the amount of content possible with current DVDs, particularly well suited for high definition feature films with extended levels of interactive features
- Pristine picture quality with the capability for full high definition 1920 x 1080p resolution
- Best audio possible with uncompressed surround sound (higher quality than even theatre audio)
- Broadest industry support – ensuring more choices for consumers in the marketplace
- Hardware products will be backward compatible with DVDs, allowing continued enjoyment of existing DVD libraries.
- Disc Durability – new breakthroughs in hard coating technologies gives Blu-ray Discs the strongest resistance to scratches and finger prints.

Types of Discs/Media Formats that Can Be Used with This Player

- The following discs can be played back in this player. Do not use an 8 cm to 12 cm adapter.
- Use discs that conform to compatible standards as indicated by the presence of official logos on the disc label. Playback of discs not complying with these standards is not guaranteed. In addition, the image quality or sound quality is not guaranteed even if the discs can be played back.

Disc Type		Recording Format	Contents	Disc Size
BD Video	Region code A/ALL   	—	Audio + Video (Movie)	12 cm
BD-RE/BD-RE DL BD-R/BD-R DL		BDMV/BD-DAV format		
DVD Video	Region code 3/ALL  	Video format	Audio + Video (Movie)	12 cm 8 cm
DVD+RW/DVD+R DVD-RW/DVD-R DVD+R DL/DVD-R DL		Video/VR/AVCHD format (finalised disc only)	Audio + Video (Movie)	12 cm 8 cm
		DivX Plus® HD (H.264/MKV)		
		JPEG*2	Still image (JPEG file)	
		MP3*3	Audio	
Audio CD*1		Audio CD (CD-DA)	Audio	12 cm 8 cm
CD-RW/CD-R		Audio CD (CD-DA)	Audio	
		JPEG*2	Still image (JPEG file)	
		MP3*3	Audio	

Media Format	Recording Format	Contents
USB device (USB HDD, USB memory device)	DivX Plus® HD (H.264/MKV)	Audio + Video (Movie)
	JPEG*2	Still image (JPEG file)
	MP3*3	Audio

* See the following page for details on these terms.

- BD/DVD video players and discs have region codes, which dictate the regions in which a disc can be played. This Player's region code is **A** for BD and **3** for DVD. (Discs marked **ALL** will play in any player.)
- BD/DVD video operations and functions may be different from the explanations in this manual and some operations may be prohibited due to disc manufacturer's settings.
- If a menu screen or operating instructions are displayed during playback of a disc, follow the operating procedure displayed.

NOTE

- Playback for some of the discs in the left side column tables may not be possible depending on the disc.
- "Finalise" refers to a recorder processing a recorded disc so that it will play in other DVD players/recorders as well as this player. Only finalised DVD discs will play back in this player. (This player does not have a function to finalise discs.)
- Regarding DVD+RW/+R/+R DL discs, only video format discs (finalised) can be played back. JPEG files, MP3 files, DivX Plus® HD files, etc. cannot be played back.
- Some discs cannot be played back depending on the recording format.
- DivX playback may not be available depending on the DivX content and file.
- For details on file compatibility for USB devices, refer to page 60.

Discs that Cannot Be Used with This Player

The following discs cannot be played back or will not play back properly on this player. If such a disc is mistakenly played back, speaker damage may occur. Never attempt to play back these discs.

CDG, Video CD, Photo CD, CD-ROM, CD-TEXT, SVCD, SACD, PD, CDV, CVD, DVD-RAM, DVD-Audio, BD-RE with the cartridge, CD-WMA

Discs with unusual shapes cannot be played.

- Discs with unusual shapes (heart-shaped or hexagonal discs, etc.) cannot be used. The use of such discs will cause malfunction.

The following BD video discs cannot be played.

- Discs not displaying "A" or "ALL" for the region code (discs sold outside the authorised marketing area).*
 - Discs produced illegally.
 - Discs recorded for commercial use.
- * The region code for this product is A.

The following DVD video discs cannot be played.

- Discs not displaying "3" or "ALL" for the region code (discs sold outside the authorised marketing area).*
 - Discs produced illegally.
 - Discs recorded for commercial use.
- * The region code for this product is 3.

The following BD-RE/R, DVD-RW/R and DVD+RW/R discs cannot be played.

- Discs on which data has not been recorded cannot be played back.
- Playback compatibility with self recorded BD-discs cannot be guaranteed.
Compatibility will be affected by the choice of BD-recorder, BD-disc and BD-burning software.
For best compatibility, record your BD-disc in the BD-MV/BD-AV standard.

*1 The following Audio CD discs cannot be played.

- Discs containing a signal for the purpose of protecting copyrights (copy control signal) may not be played back with this player.
- This player has been designed on the premise of playing back Audio CDs that comply with CD (Compact Disc) standards.

The following CD-RW/R discs cannot be played.

- Discs on which data has not been recorded cannot be played back.
- Discs recorded in a format other than an Audio CD and JPEG/MP3 file format cannot be played back.
- Discs may not be played back depending on their recording status or the status of the disc itself.
- Discs may not be played back depending on their compatibility with this player.

*2 About the JPEG file format

JPEG is a type of file format for storing still-image files (photos, illustrations, etc.). The player lets you play JPEG format still-image files.

File formats that are not compatible.

- Still images in formats other than JPEG (such as TIFF) cannot be played.
- There may be some files that cannot be played even if they are in JPEG format.
- Progressive JPEG files cannot be played.
- Moving image files as well as Motion JPEG format files cannot be played, even though they are JPEG files.

Other files that cannot be played back.

- You may not be able to play some still images which you have created, touched up, copied or otherwise edited on your computer.
- You may not be able to play some still images you have processed (rotated or saved by overwriting other images you have imported from the Internet or e-mail).

You may experience one or more of the following symptoms when playing files.

- It may take some time to play files depending on the number of folders, number of files and volume of data involved.
- EXIF information will not be displayed. EXIF stands for Exchangeable Image File Format, and is a standard for storing interchange information in image files, especially those using JPEG compression. (Refer to <http://exif.org> for more information.)

*3 About the MP3 file format

MP3 files are audio data compressed in the MPEG1/2 Audio layer-3 file format. "MP3 files" have ".mp3" as extensions. (Some files that have ".mp3" extensions or files that have not been recorded in MP3 format will produce noise or cannot be played.)

Playing the MP3 file format

- The MP3 files are not played in the order they were recorded.
- It is recommended to record data at a lower speed as data recorded at a fast speed can produce noise and may not be able to be played.
- The more folders there are, the longer the reading time.
- Depending on the folder tree, reading MP3 files can take time.
- The playing time may not be correctly displayed during MP3 file playback.

The following files cannot be played on this player.

- When both Audio CD [CD-DA] format and JPEG/MP3 file formats are recorded on a disc. (The disc is recognised to be an Audio CD [CD-DA] only tracks in Audio CD [CD-DA] format are played back.)
- Multi-session discs cannot be played.

About the DivX Plus® HD (H.264/MKV) file format


- DivX playback may not be available depending on the DivX content and file.

About Media Types

About files/folders for Still images (JPEG files) and audio data (MP3 files)

You can play still images (JPEG files) /audio data (MP3 files) with this unit by making folder(s) on discs or USB devices as shown below.

Example of a folder structure (Disc):

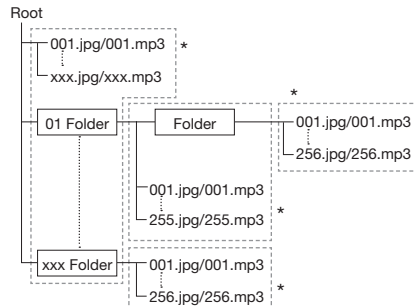

* Including the root directory, the maximum number of folders and files in each folder is limited to 256 in total.

File and folder requirements

- The discs or USB devices which this player can play back (recognise) are limited to the following properties:
 - Contains EXIF format files (only JPEG files)
 - Picture resolution: Between 32 x 32 and 7680 x 4320 pixels (only JPEG files)
 - Maximum number of folders and files in each folder:
 - Disc: 256
 - USB device: 65536
 - Maximum hierarchy level of folders: 5
 - File size: 20 MB or less (JPEG files)
 - 200 MB or less (MP3 files)

NOTE

- File and folder names displayed on this player may differ from those displayed on PCs.

ABOUT DivX VIDEO

- DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

DivX Certified® to play DivX® and DivX Plus® HD (H.264/MKV) video up to 1080p HD including premium content.

ABOUT DivX VIDEO-ON-DEMAND

- This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

About Disc Contents

BD Video

Enjoy BD-specific functions including BONUSVIEW (BD-ROM Profile 1 Version 1.1), such as picture-in-picture, and BD-LIVE (page 28).

For the BD video discs compatible with BONUSVIEW/BD-LIVE, you can enjoy additional contents by copying the data from the discs or downloading it via the Internet. For instance, this function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.


NOTE

- The available functions differ depending on the disc.

Title, Chapter and Track

- Blu-ray discs and DVDs are divided into “Titles” and “Chapters”. If the disc has more than one movie on it, each movie would be a separate “Title”. “Chapters”, on the other hand, are subdivisions of titles. (See Example 1.)
- Audio CDs are divided into “Tracks”. You can think of a “Track” as one tune on an Audio CD. (See Example 2.)

Example 1: Blu-ray disc or DVD

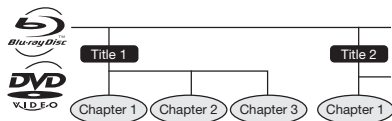


Example 2: Audio CD



Icons Used on BD/DVD Video Disc Cases

The back of the case of a BD/DVD that is commercially available usually contains various information about the contents of the disc.

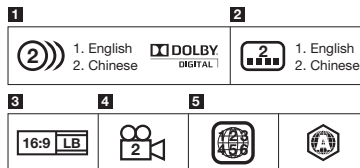

DVD Video BD Video

1 Audio tracks and audio formats

BD and DVD discs can contain up to 8 separate tracks with a different language on each. The first in the list is the original track.

This section also details the audio format of each soundtrack — Dolby Digital, DTS, MPEG etc.

Dolby Digital

A sound system developed by Dolby Laboratories Inc. that gives movie theatre ambience to audio output when the player is connected to a Dolby Digital processor or amplifier.

DTS

DTS is a digital sound system developed by DTS, Inc. for use in cinemas.

Linear PCM

Linear PCM is a signal recording format used for Audio CDs and on some DVD and Blu-ray discs. The sound on Audio CDs is recorded at 44.1 kHz with 16 bits. (Sound is recorded between 48 kHz with 16 bits and 96 kHz with 24 bits on DVD video discs and between 48 kHz with 16 bits and 192 kHz with 24 bits on BD video discs.)

2 Subtitle languages

This indicates the kind of subtitles.

3 Screen aspect ratio

Movies are shot in a variety of screen modes.

4 Camera angle

Recorded onto some BD/DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left side, from the right side, etc.).

5 Region code

This indicates the region code (playable region code).

The Icons Used in This Operation Manual

BD VIDEO	Indicates the functions that can be performed for BD Video discs.
BD-RE	Indicates the functions that can be performed for BD-RE discs.
BD-R	Indicates the functions that can be performed for BD-R discs.
DVD VIDEO	Indicates the functions that can be performed for DVD Video discs.
DVD-RW	Indicates the functions that can be performed for DVD-RW discs.
DVD-R	Indicates the functions that can be performed for DVD-R discs.
AUDIO CD	Indicates the functions that can be performed for Audio CDs.
CD-R	Indicates the functions that can be performed for CD-R discs.
CD-RW	Indicates the functions that can be performed for CD-RW discs.
USB	Indicates the functions that can be performed for USB devices.





Important Information

Disc Precautions

Be Careful of Scratches and Dust

- BD, DVD and CD discs are sensitive to dust, fingerprints and especially scratches. A scratched disc may not be able to be played back. Handle discs with care and store them in a safe place.

Proper Disc Storage

Place the disc in the centre of the disc case and store the case and disc upright.	
Avoid storing discs in locations subject to direct sunlight, close to heating appliances or in locations of high humidity.	
Do not drop discs or subject them to strong vibrations or impacts.	
Avoid storing discs in locations where there are large amounts of dust or moisture.	

Handling Precautions

- If the surface is soiled, wipe gently with a soft, damp (water only) cloth. When wiping discs, always move the cloth from the centre hole toward the outer edge.



- Do not use record cleaning sprays, benzene, thinner, static electricity prevention liquids or any other solvent.
- Do not touch the surface.
- Do not stick paper or adhesive labels to the disc.
- If the playing surface of a disc is soiled or scratched, the player may decide that the disc is incompatible and eject the disc tray, or it may fail to play the disc correctly. Wipe any dirt off the playing surface with a soft cloth.

Cleaning the Pick Up Lens

- Never use commercially available cleaning discs. The use of these discs can damage the lens.
- Request the nearest service centre approved by SHARP to clean the lens.

Warnings about dew formation

- Condensation may form on pick up lens or disc in the following conditions:
 - Immediately after a heater has been turned on.
 - In a steamy or very humid room.
 - When the player is suddenly moved from a cold environment to a warm one.

When condensation forms:

- It becomes difficult for the player to read the signals on the disc and prevents the player from operating properly.



To remove condensation:

- Take out the disc and leave the player with the power off until the condensation disappears. Using the player when there is condensation may cause malfunction.

License and Copyright


Audio-visual material may consist of copyrighted works which must not be recorded without the authority of the owner of the copyright. Refer to relevant laws in your country.

- "This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited."
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio | Essential and the DTS logos are trademarks of DTS, Inc. Product includes software. ©DTS, Inc. All Rights Reserved.

-  is a trademark.
- "BD-LIVE" logo is a trademark of Blu-ray Disc Association.
-  is a trademark of DVD Format/Logo Licensing Corporation.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- "x.v.Colour" and "x.v.Colour" logo are trademarks of Sony Corporation.
- Java is a registered trademark of Oracle and/or its affiliates.
- "BONUSVIEW" logo is a trademark of Blu-ray Disc Association.
- "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- "Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of Blu-ray Disc Association.
- YouTube is a trademark of Google Inc.
- DivX®, DivX Certified®, DivX Plus® HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.
- LCフォント、LCFONT、エルシーフォント and LC logo mark are registered trademarks of SHARP Corporation. This product is embedded with LC Font technology, which was developed by SHARP Corporation for clearly displaying easy-to-read characters on a LCD screen. However, other non-LCD fonts are used for displaying some screen pages.
- "Copyright 2004-2010 Verance Corporation. Cinavia™ is a Verance Corporation trademark. Protected by U.S. Patent 7,369,677 and worldwide patents issued and pending under license from Verance Corporation. All rights reserved."


Major Components

Main Unit (Front)

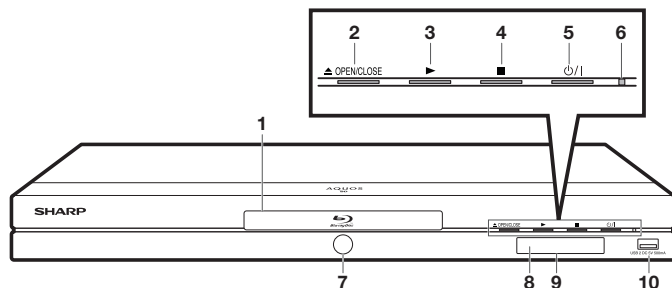

- | | |
|--------------------------------------|---|
| 1 Disc tray (page 25) | 8 Remote control sensor (page 20) |
| 2 OPEN/CLOSE (page 25) | 9 Front panel display (page 21) |
| 3 ► PLAY (page 25) | <ul style="list-style-type: none"> The elapsed time is displayed during playback. |
| 4 ■ STOP (page 25) | <ul style="list-style-type: none"> When skipping is performed, the chapter (or track) number is displayed. |
| 5 ⏻ (Power) (page 21) | |
| 6 ⏻ (On/Standby) indicator (page 21) | |
| 7 BD/DVD/CD mode indicator (page 21) | 10 USB2 terminal (pages 18, 27, 31, 34) |

Main Unit (Rear)

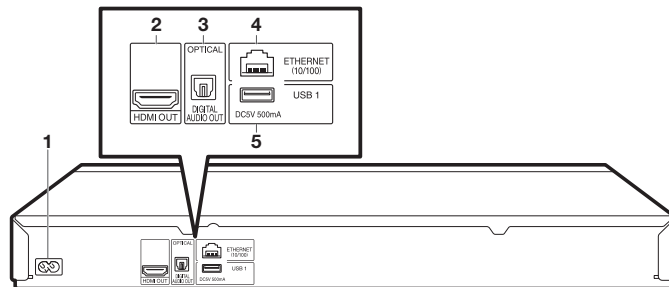


- | |
|--|
| 1 AC IN terminal (page 20) |
| 2 HDMI OUT terminal (page 16) |
| 3 DIGITAL AUDIO OUT OPTICAL terminal (page 17) |
| 4 ETHERNET terminal (page 19) |
| 5 USB1 terminal (pages 18, 27, 31) |

NOTE

- When you insert or remove a USB device, be sure to turn off the main power of this player and the USB device (only if connecting a USB HDD). Also, be sure to set "Quick Start" to "No" (See page 45) before inserting or removing the device. If you insert or remove the device with the player or Quick Start on, the data may become damaged.

Remote Control Unit

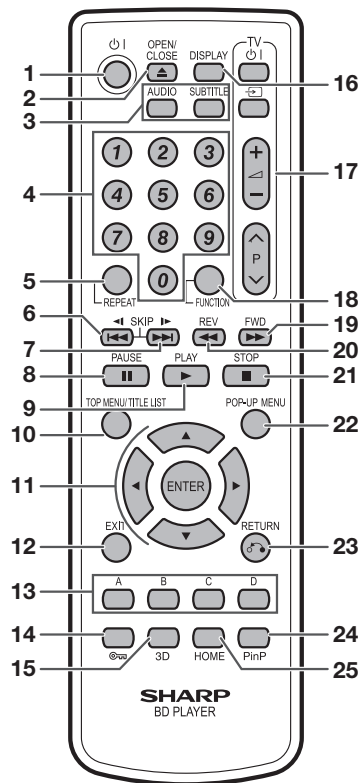

- 1 ⏻ | (Power) (page 21)
- 2 ▲ OPEN/CLOSE (page 25)
- 3 AUDIO (p. 39), SUBTITLE (page 39)
- 4 Number buttons (page 41)
- 5 REPEAT (page 38)
- 6 ⏮ SKIP/⏮ (pages 29, 37)
- 7 ⏭ SKIP/⏭ (pages 29, 37)
- 8 ⏮⏭ PAUSE (pages 33, 34, 35, 37)
- 9 ▶ PLAY (page 25)
- 10 TOP MENU/TITLE LIST (pages 26, 29)
- 11 Cursor buttons (▲/▼/◀/▶), ENTER (pages 22, 42)
- 12 EXIT (pages 33, 36, 42)
- 13 A (Red), B (Green), C (Yellow), D (Blue) (pages 29, 30, 35, 49)
- 14 🔒 (Lock) (See below.)
- 15 3D (page 23)
- 16 DISPLAY (pages 26, 38)
- 17 TV control buttons (page 22)
- 18 FUNCTION (pages 38, 40)
- 19 ⏭ FWD (page 37)
- 20 ⏮ REV (page 37)
- 21 ■ STOP (page 25)
- 22 POP-UP MENU (page 27)
- 23 ↶ RETURN (pages 33, 35, 36, 38)
- 24 PinP (page 28)
- 25 HOME (pages 22, 33–36, 42)

Keylock Function

You can set the keylock to prevent accidental operations.

This function allows TVs compatible with AQUOS LINK to also perform a Key Lock on the player. Press and hold 🔒 (Lock) for more than 3 seconds.


- Each time you perform this operation, the function is activated or deactivated.
- If you try to operate the player while the keylock function is set, "Hold" blinks on the front display panel to indicate that the keylock function is set.

Hold

Connecting to a TV/Projector

You can enjoy high quality digital picture and sound using an HDMI cable. (Only TVs/projectors with an HDMI terminal can be connected to this player.) When you use AQUOS LINK, make sure to use a certified HDMI cable.

- 1 Be sure to turn off this player and the TV/projector before making any connections.
- 2 Firmly connect the HDMI cable (supplied) to the HDMI OUT terminal on the player (①) and the HDMI IN terminal of the TV/projector (②).

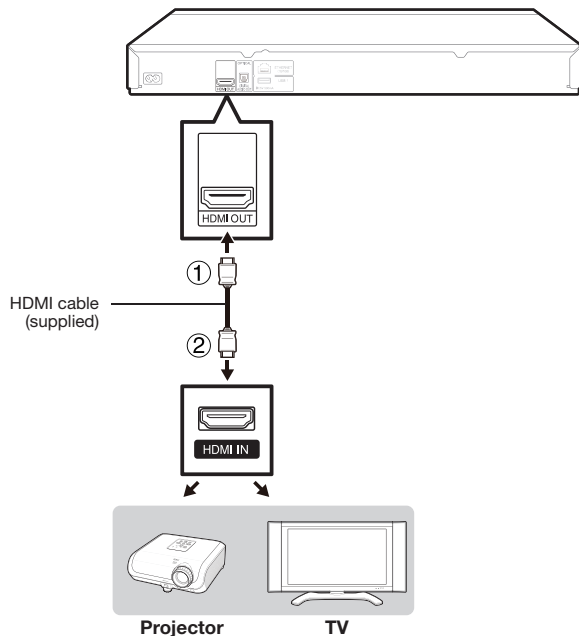

NOTE

- In this player, "HDMI Video Out" is set to "Auto" as a default (See page 44). (Normally set to "Auto".) If you don't get a stable image with "HDMI Video Out" set to "Auto", select the output resolution which corresponds to the connected equipment.
- To enjoy 3D images, connection to a 3D compatible TV is needed.
- For connection to a TV/projector, refer to the TV/projector's operation manual.

After connecting

- If desired, connect audio equipment. (Page 17)
- If necessary, perform the Audio Video Settings. (Pages 44–45)
- Refer to AQUOS LINK function. (Pages 23 and 45)
- Prepare the desired disc or content and start playback. (Pages 25–36, 55)

Connecting to an Amplifier/AV Receiver


You can connect this player to an amplifier/AV receiver to enjoy digital surround sound. With this player, the audio connection can be made using either one of the following methods depending on the capabilities of the amplifier/AV receiver you connect.

- HDMI connection
- Digital audio connection

NOTE

- Be sure to turn off this player and the equipment before making any connections.
- For details on output of audio formats, see page 54.

HDMI Connection

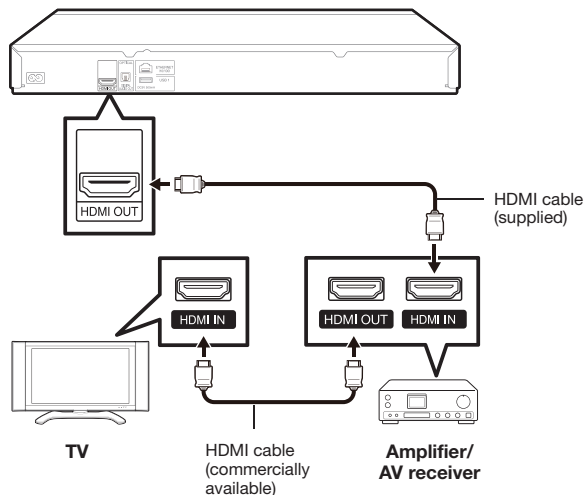


NOTE

- When using an HDMI output, 7.1 ch Digital Output is available.
 - Audio transmitted in DTS-HD High Resolution Audio and DTS-HD Master Audio formats is output from the HDMI terminal as Bitstream. Connect an amplifier with a built-in decoder to enjoy the fine sound quality.
 - When a connection to a 3D TV is made via an amplifier/AV receiver, it is necessary to connect to a 3D compatible amplifier/AV receiver.
- If the amplifier/AV receiver is not 3D compatible, connect the HDMI cable to the TV directly while connecting the player and the amplifier/AV receiver using an optical digital cable.

Digital Audio Connection

You can connect an amplifier/AV receiver using an optical digital audio cable (commercially available).

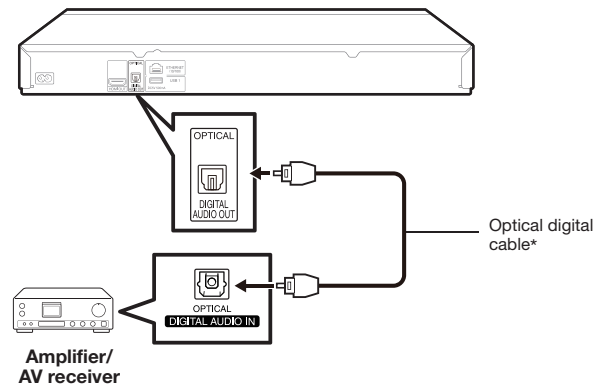

* Commercially available

NOTE

- When using OPTICAL DIGITAL AUDIO OUT, 5.1ch Digital Output is available. (7.1ch Digital Output is not available.)

After connecting

- If necessary, perform the Audio Video Settings. (Pages 44–45)
- Prepare the desired disc or content and start playback. (Pages 25–36, 55)

Connecting to a USB Device


You can connect USB devices to this player (USB memory device, USB HDD) to enjoy video, music, or picture files stored on the USB device. This player has 2 USB terminals, one on the front side and another on the rear side.

NOTE

- When you insert or remove a USB device, be sure to turn off the main power of this player and the USB device (only if connecting a USB HDD). Also, be sure to set "Quick Start" to "No" (See page 45) before inserting or removing the device. If you insert or remove the device with the player or Quick Start on, the data may become damaged.

USB Memory Device Connection


Example: Front*

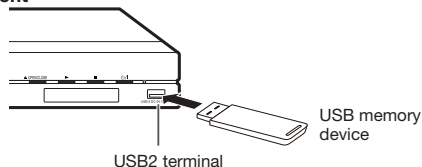

* A USB terminal is also available on the rear side (USB1 terminal).

USB HDD Connection

Example: Front*

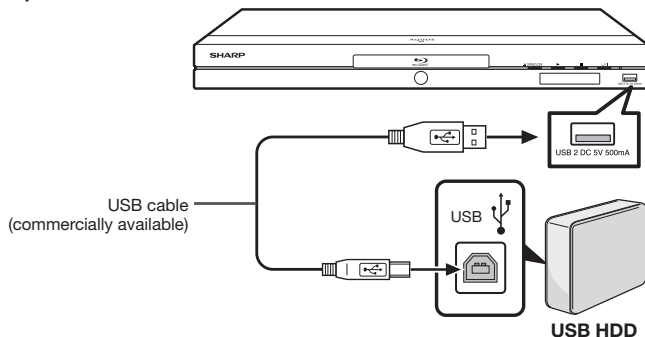

* A USB terminal is also available on the rear side (USB1 terminal).

- 1 Connect a USB cable (commercially available) to the USB1 or USB2 terminal on this player and the USB port of the USB HDD.
- 2 Turn on the power of the USB HDD.
- 3 Press to turn on the power of this player.

CAUTION

- SHARP cannot guarantee breakdown or malfunction of a USB HDD, or loss of the stored data in a USB HDD caused by connecting to other equipment.

NOTE

- Make sure to use a USB device supporting USB 2.0 High Speed (480 Mbps).
- Only self-powered type USB HDD can be used with this player. USB-powered HDD cannot be used.
- Refer to the operation manual for the USB HDD for details regarding usage.
- This player cannot play back TV programmes recorded in a USB HDD by a recorder.

Regarding USB HDD formats

USB HDD is compatible with the following formats:

	Formats		
	FAT32	NTFS	EXT3
Format	✓	—	—
Copy	✓	—	✓
Delete	✓	—	✓
Play	✓	✓	✓

NOTE

- USB HDD of 2TB or less can be used. Do not use USB HDD with multiple partitions. Size limits for each type of file are shown below:
FAT32: 4GB
EXT3: 2GB
NTFS: 2TB
- Only USB memory devices and USB HDD formatted by FAT32 can be used as Local Storage for BD-LIVE. USB HDD formatted on Windows 7 cannot be recognised by this player. It is recommended to format a USB memory device and USB HDD on this player. (Page 50)

After connecting

- To play back video, music or picture files stored in a USB device, see pages 31–32 and 34–35.
- To initialise data stored in a USB device or delete BD-LIVE data, see page 50.

Broadband Internet Connection


By connecting this player to the Internet, you can enjoy a variety of content on your TV using BD-LIVE functions, video on demand services (e-Contents), home networks and also perform software updates.

NOTE

- Be sure to turn off this player and the equipment before making any connections.

Wired Connection (LAN Cable)

Connect a LAN cable (commercially available) to the ETHERNET terminal of this player (①) and the LAN port of the broadband router (②).

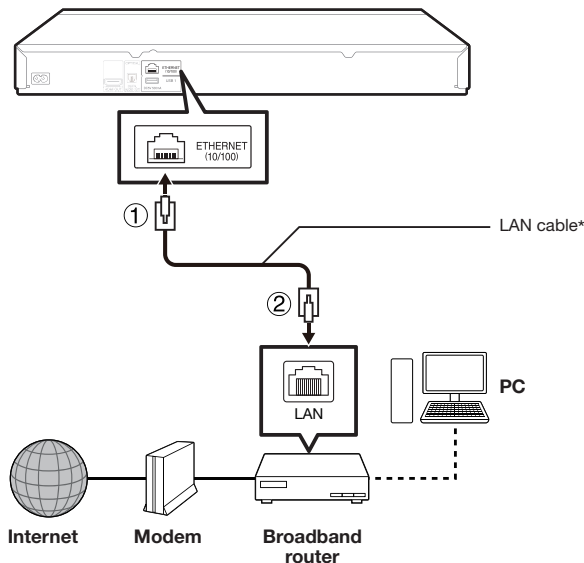

* Commercially available

NOTE

- Use a LAN cable/router supporting 10BASE-T/100BASE-TX.
- SHARP cannot guarantee that all brands' broadband routers will operate with this player.

CAUTION

- When using a broadband Internet connection, a contract with an Internet service provider is required. For more details, contact your nearest Internet service provider.
- Refer to the operation manual of the equipment you have as the connected equipment and connection method may differ depending on your Internet environment.


After connecting

- Perform the communication settings. (Pages 48–49)
- When enjoying BD-LIVE functions, see pages 28 and 46.
- When enjoying video on demand services (e-Contents), see page 55.
- To play back files via the Home Network, see page 36.
- To update the software via the Internet, perform Software Update Settings. (Pages 51–52)


Before Starting Playback

Loading the Batteries in the Remote Control


- 1 Hold in the tab on the battery cover and pull the cover towards the direction of the arrow.

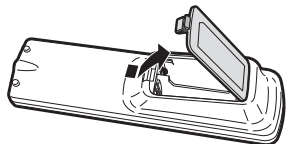

 - 2 Load the two "AA" size batteries (R-06 size, UM/SUM-3). Place batteries with their terminals corresponding to the $+$ and $-$ indications in battery compartment.



- 3 Insert the smaller tab of the battery cover into the opening ①, and press down on the cover until it clicks in place ②.

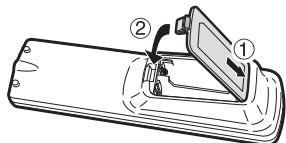


WARNING

- Do not use or store batteries in direct sunlight or other excessively hot place, such as inside a car or near a heater. This can cause batteries to leak, overheat, explode or catch fire. It can also reduce the life or performance of batteries.

NOTE


- Do not subject the remote control unit to shock, water or excessive humidity.
- The remote control unit may not function if the Player's remote sensor is in direct sunlight or any other strong light.
- Incorrect use of batteries may cause them to leak or burst. Read the battery warnings and use the batteries properly.
- Do not mix old and new batteries, or mix different brands.
- Remove the batteries if you will not use the remote control unit for an extended period of time.

Approximate Operating Range of Remote Control

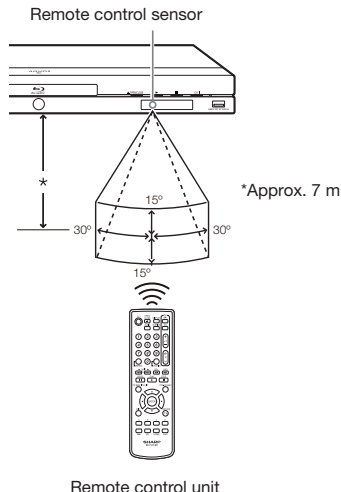

Connecting the Power Cord

Plug the supplied AC cord into the AC IN terminal on the rear of the player (①). Then plug into AC outlet (②).

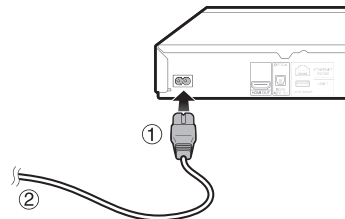


NOTE

- Place the player close to the AC outlet, and keep the power plug within reach.
- TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT TOUCH THE UN-INSULATED PARTS OF ANY CABLES WHILE THE AC CORD IS CONNECTED.
- The \odot | (On/Standby) indicator blinks while the player is preparing for starting up. You cannot turn the player on until the \odot | (On/Standby) indicator stops blinking.
- If you are not going to use this player for a long period of time, be sure to remove the AC cord from the AC outlet.

Before Starting Playback

Turning the Power On

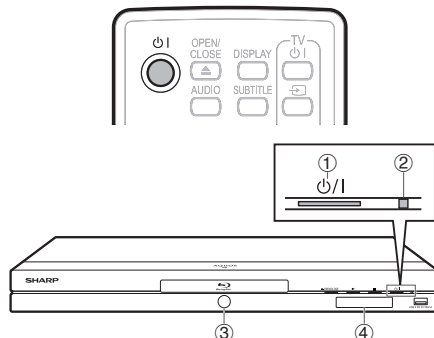

- ① P (Power) button
- ② P | (On/Standby) indicator
- ③ BD/DVD/CD mode indicator
- ④ Front panel display

Turning the Power On

Press P | on the remote control or on the player to turn on the power of the player.




NOTE

- When you turn on this player for the first time after purchase or when you turn on this player after you perform "System Reset" (see page 47), the language setting screen will be displayed, so please perform the language setting (see step 4 of page 22).
- When "Quick Start" is set, "HELLO" will not be displayed on the front panel display.

Entering Standby

Press P | on the remote control or on the player to enter standby.

 

NOTE

- If you press P | again immediately after entering standby, the player may not turn on. If this happens, wait for 10 seconds or more and then turn on the power again.
- When the P | (On/Standby) indicator is blinking (may take some time), the player cannot be turned on.

Indicators on the Player

P | (On/Standby) indicator

Green on	Power on
Red on	Standby


BD/DVD/CD mode indicator

Blue on	Playing back
Blue blinks	Loading a disc/updating

About the Home Screen

When turning on the player, the Home screen appears.

Home screen

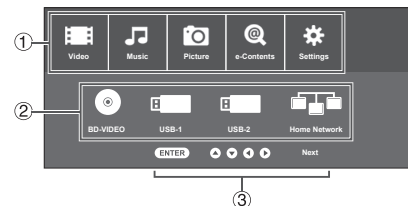


- ① Main menu
- ② Submenu
- ③ Button Guide

Playback

Before Starting Playback

Language Setting

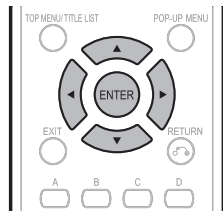

Changing the On-Screen Display Language

- 1 Press **◀▶** to select “Settings”, then press **▼** or **ENTER**.
- 2 Press **◀▶** to select “System”, then press **▼** or **ENTER**.
- 3 Press **▲▼** to select “On Screen Language”, then press **▶** or **ENTER**.
- 4 Press **▲▼** to select the language you want to display on the screen, then press **ENTER**.

NOTE

- To select the DVD disc language, such as subtitle language, etc., see page 26.

Operating a SHARP TV Using the Remote Control

The Universal Remote Control may operate the basic functions of the SHARP TV.

TV Function Control




- TV Power: **⏻**
- TV-AV Selector: **→**
- TV Volume up/down: **▲▼**
- TV Channel up/down: **P ▲▼**

Turning Off or Dimming the LED Light and Indications

If you feel that the indicators on the player's front display are too bright when watching movies, you can turn them off except for the **⏻** (On/Standby) indicator.

You can also adjust the brightness of the front display/LED light by selecting “Dimmer”.

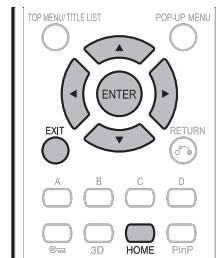

- 1 Press **◀▶** to select “Settings”, then press **▼** or **ENTER**.
- 2 Press **◀▶** to select “Smart Settings”, then press **▼** or **ENTER**.
- 3 Press **▲▼** to select “Front Display/LED”, then press **▶** or **ENTER**.
- 4 Press **▲▼** to select “On”, “Dimmer” or “Off”, then press **ENTER**.
- 5 Press **HOME** or **EXIT** to exit.

NOTE

- When “Dimmer” is selected, the BD/DVD/CD mode indicator turns off.

Before Starting Playback

Using AQUOS LINK

Controlling the Blu-ray Disc Player Using AQUOS LINK

What is AQUOS LINK?

Using the HDMI CEC (Consumer Electronics Control), with AQUOS LINK you can interactively operate this player with your SHARP AQUOS TV.

What you can do with AQUOS LINK

When you connect this player to the LCD TV compatible with AQUOS LINK using an HDMI cable, you can perform the functions listed below. (See page 16 for connecting to the HDMI terminal).

Automatic input select function

When you start playback of this player, the input selector of the LCD TV will automatically switch to the LCD TV input terminal connected to the player and the playback image will appear on the screen, even if you are watching a TV programme.

Automatic power off function

If you turn off the LCD TV when this player is in stop mode, the power of this player will be turned off automatically. (However, when playing back a disc or other content using this player, the power does not turn off.)

Automatic power on function

When you switch to the LCD TV input terminal connected to this player, the power of this player will be turned on automatically.

AQUOS PURE MODE

When you connect this player to an AQUOS LCD TV compatible with AQUOS LINK and set "AQUOS LINK" to "Yes" (page 45), images automatically adjusted to the most suitable image quality for the AQUOS TV are output from the HDMI OUT terminal of this player.

NOTE

- In order to make AQUOS LINK available, set "AQUOS LINK" to "Yes" (See page 45). Refer to the Operation Manual of the TV for details regarding setup.

Using 3D

This sets output of 3D images.

To view 3D images, playback of 3D content (3D BD video) is necessary with a 3D compatible TV and 3D glasses in addition to this player.



Press **3D** to change to the 3D mode.

- Each time the button is pressed, the mode switches between "Auto" and "2D".
- The status of the selected mode will be displayed on the TV screen.

Auto: Video signals are output as 3D when 3D content (3D BD video) is played or as 2D when 2D content is played.

2D: Even if 3D content (3D BD video) is played, video signals are output as 2D at all times.

- This setting (Auto(3D)/2D) can also be performed using the menu screen (See page 47).

NOTE

- The 3D mode can be switched only when playback is stopped.
- Depending on the connected TV, the images during playback may switch to 2D images due to changes in the resolution, etc. Make sure the 3D image setting is performed on the TV.
- The 3D images may not be output as set in "HDMI Video Out".
- When performing Fast Forward/Reverse, images are shown in 2D.

CAUTION

- When viewing 3D images, viewing for a long period of time or lying on your back may cause eye strain and discomfort. In addition, 3D images may affect the eyesight of young children/infants, so keep them from viewing the images.

Before Starting Playback

Control Panel

This function allows you to operate this player using the TV remote control by displaying the control panel on the TV screen.


- To operate this function, connect this player to a TV compatible with HDMI CEC (Consumer Electronics Control) using an HDMI cable (See page 16). Make sure that "Control Panel" is set to "Yes" (See page 45). When the settings are completed, perform the following operations.

NOTE

- The control panel may not be displayed depending on the TV. Also, it may not be available depending on the content.
- When operating using the remote control of the player, the control panel does not appear.
- When playing video on demand streaming content available with this player, the control panel cannot be displayed.

- 1 Switch the TV input to the input source to which this player is connected (HDMI input).
- 2 Press the **PLAY** button on the TV remote control.
 - The control panel appears on the TV screen.

Control Panel

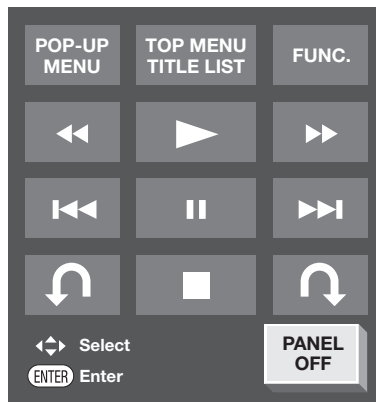



- When there is no operation for approximately 10 seconds, the control panel disappears automatically.
To display the control panel, press the **PLAY** button on the TV remote control.
- 3 Press **▲/▼/◀/▶** on the TV remote control to select the desired button icon, then press **ENTER**.
 - The function of the selected button icon is available.

Major functions of each button icon


POP-UP MENU	• Display the pop-up menu screen for BD video and the menu screen for DVD video.
TOP MENU TITLE LIST	• Display the top menu screen for BD video and DVD video.
FUNC.	• Display the Function Control screen for BD video, DVD video, etc.
	• Fast reverse (search).
	• Play.
	• Fast forward (search).
	• Skip to the beginning of a chapter.
	• Pause.
	• Skip to the next chapter.
	• Jump backward (approx. 10 seconds). (This function is used when you want to re-watch a scene that has just been shown.)
	• Stop.
	• Jump ahead (approx. 30 seconds).
PANEL OFF	• Turn off the control panel.

Video/Picture/Music Playback

 Loading a Disc

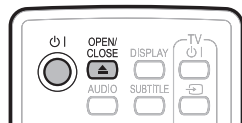

 - 1 Press **I/O** to turn on the power.
- 2 Press **OPEN/CLOSE** to open the disc tray.
- 3 Load a disc on the disc tray.
 - Insert the disc with the label face up.
 - In case of disc recorded on both sides, face down the side to play back.



- 4 Press **OPEN/CLOSE** to close the disc tray.


BD/DVD Video Playback

BD VIDEO BD-RE BD-R

DVD VIDEO DVD-R DVD-RW

This section explains playback of commercially available BD Video and DVD Video discs (like movies) and recorded DVD-RW/R discs.

- This player supports DVD upscaling during DVD playback.
- For a description of other playback functions, refer to "Playback Functions" on pages 37–39.

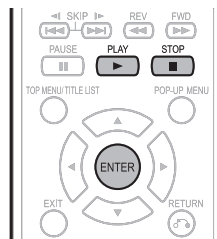

- 1 Load a disc.
 - Playback may begin automatically, depending on the disc.
 - Playback begins from the first title.
 - The menu may be displayed first, depending on the disc. Perform playback operation by following the directions on the screen.
 - When loading a disc containing 3D content (3D BD video) with "Yes" selected in the "3D Notice" setting (page 47), playback will be stopped and the 3D notice will be displayed on the TV screen. In such cases, press **ENTER** for confirmation, and then playback will start.
- 2 Press **▶PLAY** if playback does not begin automatically or playback is stopped.

NOTE

- The disc load time may vary depending on the disc.

Regarding playback of BD video discs

- Some of the newly released BD video discs cannot be played back unless you update the player software to the latest version. Therefore, it may be required to update the software of the player.
- Refer to pages 51–54 for more information regarding software updates for the player.

To stop playback

Press **■STOP**.


Resume playback function

- If you press **▶PLAY** next, playback will resume from the point where the player was previously stopped. To playback from the beginning, cancel resume mode by pressing **■STOP**, then press **▶PLAY**. (This may not work depending on the type of disc. In this case, open the disc tray or enter standby.)

NOTE


- Resume playback may not function depending on the disc.
- The resume playback function for discs will be cancelled if video on demand streaming content is viewed after disc playback. Disc playback will start from the beginning after viewing streaming content.

Displaying the Disc Information

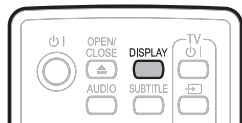

Press **DISPLAY** during playback.

- Each time you press **DISPLAY**, the display switches as follows.

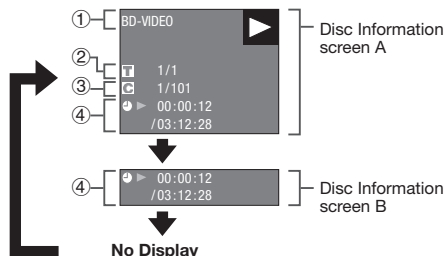


- Type of disc
- Title number being played / Total number of Titles
- Chapter number being played / Total number of Chapters
- Elapsed playback time / Total playback time for the Title

NOTE

- Disc Information Screen A disappears after about 1 minute elapses without performing any operations.
- For some commercially-released BD VIDEO discs, the total playback time display for the Chapter/Title may not appear.

BD/DVD Menus

- This section explains how to play back a BD/DVD video disc with a top menu, disc menu or pop-up menu.
- The titles listed in the top menu and a disc guide (for options like subtitles and audio languages) are given in the disc menu.

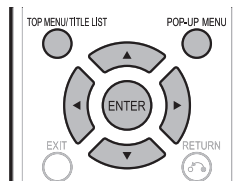

Start Playback by Selecting a Title from the Top Menu

BD VIDEO DVD VIDEO

- Press **TOP MENU/TITLE LIST**.
 - The top menu screen is displayed if present on the BD/DVD video disc.

Example

TOP MENU			
1 Jazz	2 Latin		
3 Classic	4 Rock		

- Press **▲/▼/◀/▶** to select the title, then press **ENTER**.
 - The selected title is played back.

NOTE

- The procedure explained on this page is the basic operation procedure. Procedures vary depending on the BD/DVD video disc, so you may need to follow the instructions in the BD/DVD video disc manual or the instructions displayed on the screen.

Top menu

- With some BD/DVD discs, the top menu may be referred to as the "Title Menu". Use **TOP MENU/TITLE LIST** on the remote control when the instructions refer to "Title Menu".
- If no top menu is available, the **TOP MENU/TITLE LIST** button will have no effect.

Using the Disc Menu

DVD VIDEO

Example: Select "SUBTITLE LANGUAGE".

- Press **TOP MENU/TITLE LIST**.
 - The disc menu screen is displayed if present on the DVD video disc.
- Press **▲/▼** to select "SUBTITLE LANGUAGE", then press **ENTER**.
 - The screen for selecting the subtitle language is displayed.

Example

MENU	
1 AUDIO LANGUAGE	
2 SUBTITLE LANGUAGE	
3 AUDIO	

 
- Press **▲/▼** to select the subtitle language, then press **ENTER**.
- Press **TOP MENU/TITLE LIST** to exit.

Using the Pop-Up Menu

BD VIDEO

- 1 Press **POP-UP MENU** during playback.
 - The pop up menu screen is displayed.
 - The menu contents displayed vary depending on the disc. For details on how to see and operate the pop-up menu, refer to the manual for the disc.

Example



- 2 Press **▲/▼/◀/▶** to select the desired item, then press **ENTER**.
- 3 Press **POP-UP MENU** to exit.
 - The pop-up menu will automatically disappear for some discs.

Enjoying BONUSVIEW or BD-LIVE

BD VIDEO

This player is compatible with additional functions of BD-Video, BONUSVIEW (BD-ROM Profile 1 Version 1.1) and BD-LIVE.

For BD-Video discs compatible with BONUSVIEW, the functions of Picture in Picture and Virtual Package are available. For BD-LIVE compatible discs, you can enjoy a variety of functions via the Internet in addition to the BONUSVIEW functions.


Virtual Package/BD-LIVE data is saved in Local Storage (USB device connected to this player). To enjoy these functions, connect a USB device (2GB or greater) supporting USB 2.0 High Speed (480 Mbps) to the USB1 or USB2 terminal on this player.

- It is recommended that the USB device be connected to the USB1 terminal. (When you insert or remove a USB device, be sure to turn the main power off and make sure that "Quick Start" is set to "No" (See page 45).)


NOTE

- A USB device can be used with either the USB1 or USB2 terminal. When two USB devices are connected to both terminals at the same time, in certain situations the USB1 terminal may give priority to Local Storage and the USB2 terminal cannot be used for Local Storage.

Rear

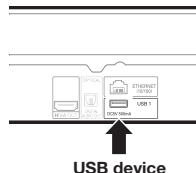

Front

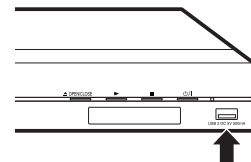

USB device

- If there is insufficient storage space, the data will not be copied/downloaded. Delete unneeded data or use a new USB device.
- If a USB device containing other data (previously recorded) is used, the video and audio may not play back properly.
- If the USB device is disconnected from this player during playback of Virtual Package/BD-LIVE data, playback of the disc will stop.
- Some time may be required for the data to load (read/write).
- Refer to "USB (HDD/Memory) Management" on page 50 for erasing the Virtual Package data and the BD-LIVE data in the USB device.

NOTE

- SHARP cannot guarantee that all brands' USB devices will operate with this player.
- If a USB device is formatted on any equipment other than this player, it may be partially or totally unavailable. It is recommended to format the device on this player. See page 18 regarding USB HDD formats.
- Do not use a USB extension cable and/or hub when connecting a USB memory device to the USB terminal of the player.
 - Using a USB extension cable and/or hub may prevent the player from performing correctly.

Use of Picture in Picture Function (Secondary Audio/Video Playback)

BD-Video that includes secondary audio and video compatible with Picture in Picture can be played back with secondary audio and video simultaneously as a small video in the corner.



- 1 Press **PinP** during playback to show the 2-picture screen.



Primary audio/
video

Secondary audio/
video

- 2 To remove the secondary video, press **PinP** again.

NOTE

- To listen to secondary audio, make sure that "Secondary Audio" is set to "On". (See page 44.)
- The secondary audio and video for Picture In Picture may automatically play back and be removed depending on the content. Also, playable areas may be restricted.

Virtual Package

For BD-Video discs compatible with Virtual Package, data is copied from the discs or Internet to local storage. It is automatically copied to the local storage prior to playback. You can enjoy a variety of additional functions including secondary video, secondary audio, subtitles, movie trailers, etc.

- The playback methods vary depending on the disc. For details, refer to the disc manual.

BD-LIVE

In this player, a variety of contents with interactive functions are available through BD-LIVE compatible Blu-ray discs by connecting to the Internet. You can enjoy the download of bonus features such as latest movie trailers to the USB device, communication compatible BD-J interactive games, etc.

- The available functions differ depending on the disc.

NOTE


- Regarding playback method of BD-LIVE contents, etc., perform the operations in accordance with the instructions in the BD disc manual.
- To enjoy BD-LIVE functions, perform the broadband Internet connection (page 19) and communication settings (pages 48–49).
- Before using this function, please read "Network Service Disclaimer" (page 65).
- Refer to page 46 regarding the setup to restrict access to BD-LIVE contents.
- If the BD-LIVE screen does not appear for a while after you select the BD-LIVE function in the BD disc menu, the USB device may not have enough free space. In such cases, eject the disc from the player, and then erase the data in the USB device in the "USB (HDD/Memory) Management" menu on page 50.

DVD-R/-RW (VR format) / BD-RE/-R (BD-RE format) Playback

DVD-R | DVD-RW | BD-RE | BD-R

You can play back a recorded disc (DVD: VR format finalised disc only / BD: BDAV format disc only).

- For a description of other playback functions, refer to "Playback Functions" on pages 37–39.

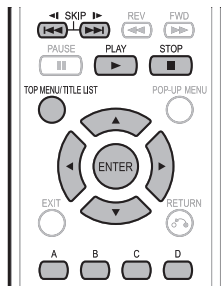


NOTE

- "Finalise" refers to a recorder processing a recorded disc so that it will play in other DVD players/recorders as well as this player. Only finalised DVD discs will play back in this player. (This player does not have a function to finalise discs.)
- Some discs cannot be played back depending on the audio format.
- BD-RE/-R discs recorded from a BD recorder comply with AACS copyright protection technology. As this player is not intended to be compliant with AACS, such discs cannot be played back. (AACS: Advanced Access Content System)

Playback by Selecting a Title

- Load a recorded disc.
 - The Title List screen is displayed.

Example: Thumbnail screen

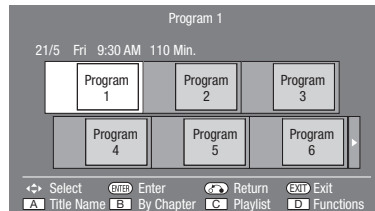

- If the Title List screen is not displayed, press **TOP MENU/TITLE LIST**.
- When loading a BD disc with usage restrictions placed by a BD recorder, the password input screen appears. Then, input your password. If you input a wrong password three times, the disc tray will open. Close the disc tray, and then input a correct password.

- Press **▲/▼/◀/▶** to select the desired title, then press **ENTER** to start playback.
 - If you want to select additional titles, switch pages by pressing **◀◀ SKIP/◀** or **▶▶ SKIP/▶**.
 - You can playback by pressing **▶ PLAY** instead of pressing **ENTER**.
- Press **■ STOP** to stop playback.


NOTE

- The Title List screen also can be displayed by pressing **TOP MENU/TITLE LIST** when playback is stopped.


About Title List

- The Title List can be displayed in two types, Thumbnail and Title Name.
- Each time you press **A (Red)**, the screen changes between Thumbnail and Title Name.

Thumbnail

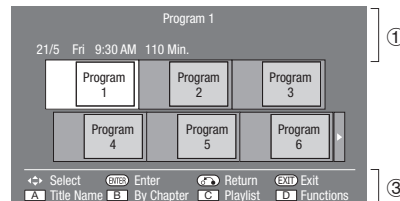


Title Name

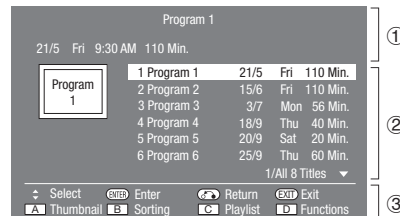

- Information of selected title
- Title Name
- Recording Date
- Recording Duration
- Button Guide

Playback by Selecting a Chapter

- 1 Press **B** (Green) while the Thumbnail screen is displayed.
 - The chapter screen is displayed.

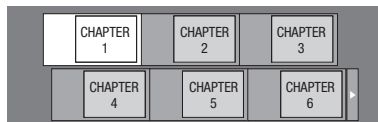

- If you want to select additional chapters, switch pages by pressing **◀◀ SKIP / ◀** or **▶▶ SKIP / ▶**.
 - To return to the Thumbnail screen, press **B** (Green).
- 2 Press **▲/▼/◀/▶** to select the desired chapter, then press **ENTER** to start playback.
 - You can playback by pressing **▶ PLAY** instead of pressing **ENTER**.
 - 3 Press **■ STOP** to stop playback.


Sorting the Titles

Each time you press **B** (Green) while the Title Name screen is displayed, the Title Name display changes between displaying the newest title first and the oldest title first.

Playback by Selecting a Playlist

- 1 Press **C** (Yellow) while the Title List screen is displayed.
 - The Playlist screen is displayed.

Example: Thumbnail screen

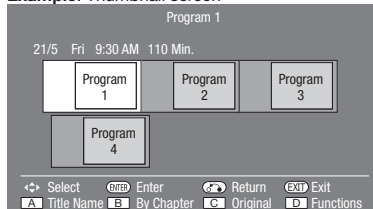

- 2 Press **▲/▼/◀/▶** to select the desired title, then press **ENTER** to start playback.
- 3 Press **■ STOP** to stop playback.

Playback from the Beginning or Resume Playback


When you play back the title from the Title List after you stopped playback, you can select playback from the beginning or from the point where it was last stopped.

- 1 Press **D** (Blue) when the desired title is selected while the Title List screen is displayed.
- 2 Press **▲/▼** to select the type of Playback, then press **ENTER** to start playback.
 - The type of Playback may be selected from "From Beginning" or "From Continued".
- 3 Press **■ STOP** to stop playback.

Playback using a USB Device

You can play back video, music and picture data stored in a USB device, including a USB HDD and a USB memory device.

- YouTube/DLNA content cannot be recorded to the USB device.
- Regarding playback of a music or picture file, see pages 34–35.
- To play back a file or content downloaded from a streaming service, see page 55.

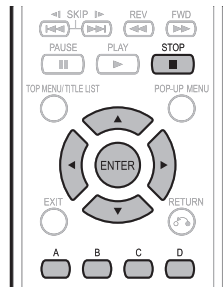


NOTE

- Depending on the format, some files cannot be played back.
- To initialise data stored in a USB device or delete BD-LIVE data, refer to “USB (HDD/Memory) Management” on page 50.

Searching/Sorting the Titles

Searching by title name


- 1 Insert a USB device* to the USB1 or USB2 terminal.
* When you insert or remove a USB device, be sure to turn off the main power of this player and the USB device (only if connecting a USB HDD) and make sure that “Quick Start” is set to “No” (See page 45).
- 2 Press ◀/▶ to select Video/Music/Picture, then press ▼ or ENTER.
- 3 Press ◀/▶ to select the desired USB terminal (“USB-1” or “USB-2”), then press ▼ or ENTER.
• The Title List screen is displayed.

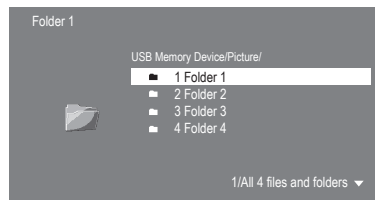

- 4 Press A (Red).
• The selection screen for searching/sorting is displayed.
- 5 Press ▲/▼ to select “By Title Name”, then press ENTER.
- 6 Enter characters to search using the screen for inputting characters.
• For details on the screen for inputting characters, see page 49.
- 7 Searching starts when all required characters have been entered.
• The search result will be displayed.
• To cancel the search result and return to the Title List screen, press A (Red).

Searching by date

- 1 Repeat step 1–4 in **Searching by title name**.
- 2 Press ▲/▼ to select “By Date”, then press ENTER.
• The screen for searching by date is displayed.

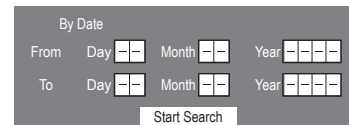

- 3 Enter the desired period of dates to search.
- 4 Once you enter all the required characters, select “Start Search” to start searching.
• The search result will be displayed.
• If you cancel the search result and return to the Title List screen, press A (Red).

Sorting the titles

- 1 Repeat step 1–4 in **Searching by title name**.
- 2 Press ▲/▼ to select “Sort”, then press ENTER.
- 3 Press ▲/▼ to select the desired sorting type (“From New”, “From Old” or “Titles”), then press ENTER.
• The titles will be displayed according to the selected sorting type.


NOTE

- When you sort titles by a sorting type, the type will be applied and the titles will be displayed according to the selected sorting type until you change the sorting type.

Selecting/Deleting Files

You can select multiple files on the Title List screen to delete or copy all at once.

- 1 When the Title List screen is displayed, press **▲/▼** to select the desired file or folder, then press **B** (Green).
 - A check mark is displayed next to the selected file or folder.
 - The number of selected files and the total file size are displayed at the left of the screen.

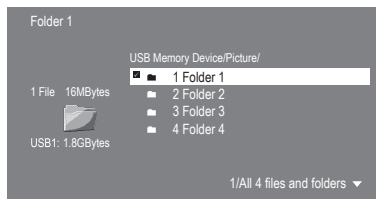

- To cancel the selection, press **B** (Green) again.
- 2 Repeat step 1 to select other files.
 - Up to 20 items can be selected at once.
 - 3 To delete the selected file(s) or folder(s), press **C** (Yellow).
 - To copy the selected file(s) or folder(s) into other USB device which is connected to this player, see "Copying files/folders" section on this page.


NOTE

- Only the following playable files can be deleted.
Video: DivX
Music: MP3
Picture: JPEG
- Deletion of a folder is not possible if it contains files other than playable files.


Copying Files/Folders

You can copy file(s) or folder(s) stored in a USB device onto another USB device.

- 1 When the file(s)/folder(s) are selected at the Title List screen, press **D** (Blue).
- 2 Press **▲/▼** to select the destination to copy ("USB1" or "USB2"), then press **ENTER**.
 - The selection screen for the destination to copy is displayed.
- 3 Press **▲/▼** to select a folder to which you want to copy.

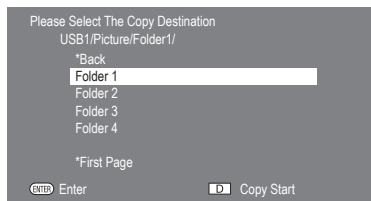

- To move into a folder, select the folder, then press **ENTER**.
 - To return to the previous screen, select "Back", then press **ENTER**.
- 4 Press **D** (Blue) to start copying.

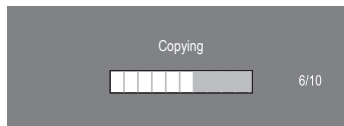

- To cancel during copying, press **STOP**.

NOTE


- Only files that are not copy-protected can be copied.
- The following types of files can be copied.
Video: DivX
Music: MP3
Picture: JPEG
- Refer to USB memory device formats shown on page 27 and the USB HDD formats on page 18.

Audio CD Playback

AUDIO CD


This player can play back audio CDs.

- For a description of other playback functions, refer to "Playback Functions" on pages 37–38.

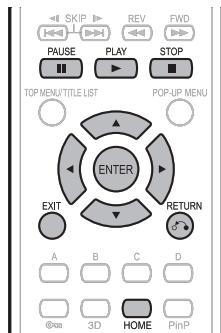

Playback from the Beginning


- Load an audio CD.
 - The CD screen is displayed. (The CD screen is displayed only when a compact disc recorded in the CD-DA format is inserted.)
 - Playback may begin automatically, depending on the disc.

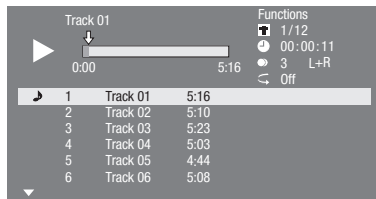

- Press **▶ PLAY** if playback does not begin automatically or playback is stopped.
- To pause the playback at any time, press **⏸ PAUSE**.
 - Press **⏸ PAUSE** or **▶ PLAY** to return to playback.
- Press **■ STOP** to stop playback.
- To return to the HOME screen, press **HOME** or **EXIT**.

Playback by Selecting a Track


- Press **▲/▼** to select the track, then press **ENTER** during playback or when playback is stopped.
 - Playback of the selected track will begin.

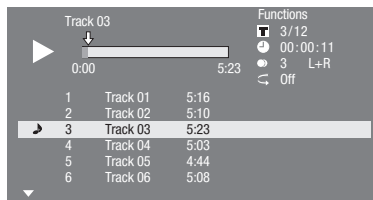

- Press **■ STOP** to stop playback.

Operation Procedure for the "Functions" Menu

- Press **D (Blue)** (Functions) when the CD screen is displayed.
 - The "Functions" menu is activated.

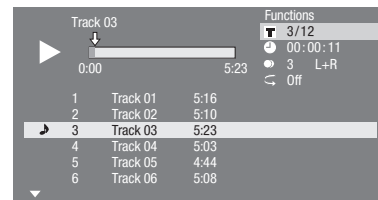

- Press **▲/▼** to select the desired setting, then press **ENTER**.
 - When playback is stopped, only "Track" can be selected.
 - For a description of each setting, see "Functions which can be set" (Page 41).
- Press **▲/▼/◀/▶** to set, then press **ENTER**.
 - Operations vary depending on the setting. Follow the operation instructions on the screen.
- Press **↶ RETURN** or **D (Blue)** to exit the "Functions" menu.

NOTE


- The displayed items vary depending on the disc.

Audio Data (MP3 File) Playback

CD-R | CD-RW | DVD-R | DVD-RW | USB

This player can play back audio data (MP3 files) recorded on CD-R/RW discs, DVD-R/RW discs and USB devices or via a home network.

- For details on the audio data that you can play using this player, refer to page 11.

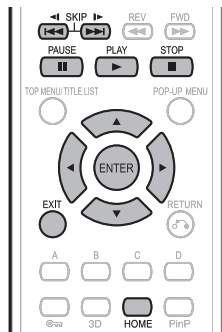

- Load a disc or a USB device* containing audio data (MP3 files).


* When you insert or remove a USB device, be sure to turn off the main power of this player and the USB device (only if connecting a USB HDD) and make sure that "Quick Start" is set to "No" (See page 45).

- Press **◀/▶** to select "Music", then press **▼** or **ENTER**.


- Press **◀/▶** to select "DVD/CD*", "USB-1", "USB-2" or "Home Network", then press **▼** or **ENTER**.

* Display name varies depending on the type of media inserted.

- Press **▲/▼** to select a folder or file.
 - When you select a folder, press **ENTER** to open it, and then press **▲/▼** to select a file in the folder.

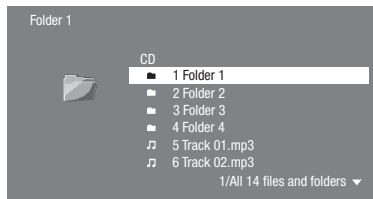

- Press **ENTER** to play back the selected file.
 - Playback of the selected file will begin.

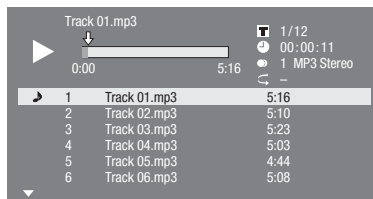

- When MP3 files are played, the "Functions" menu is not available.

- To return to the HOME screen, press **HOME** or **EXIT**.

List of available buttons during playback

Buttons	Description
▲/▼	Select a desired audio file.
ENTER	Play back audio file.
 PAUSE	Pause audio file playback. <ul style="list-style-type: none"> Return to playback when paused.
◀◀ SKIP / ◀	Skip backward.
▶▶ SKIP / ▶	Skip forward.
■ STOP	Stop playback.

NOTE


- The Fast Forward/Reverse function does not work.
- The Repeat function does not work.

Displaying Still Images (JPEG Files)

CD-R | CD-RW | DVD-R | DVD-RW | USB

This player can display still images (JPEG files) recorded on CD-R/RW discs, DVD-R/RW discs and USB devices or via a home network.

- For details on the still images that you can display using this player, refer to page 11.
- Still images are played one by one while during "Slide show", they are automatically replaced one after another.

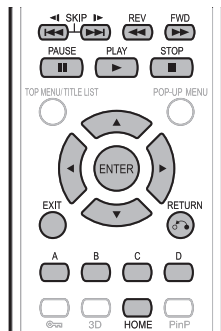

- Load a disc or a USB device* containing Still Images (JPEG files).

* When you insert or remove a USB device, be sure to turn off the main power of this player and the USB device (only if connecting a USB HDD) and make sure that "Quick Start" is set to "No" (See page 45).


- Press **◀/▶** to select "Picture", then press **▼** or **ENTER**.

- Press **◀/▶** to select "DVD/CD*", "USB-1", "USB-2" or "Home Network", then press **▼** or **ENTER**.

* Display name varies depending on the type of media inserted.

- Press **▲/▼** to select a folder or file.

- When you select a folder, press **ENTER** to open it, and then press **▲/▼** to select a file in the folder.

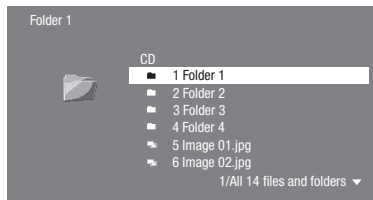

- To set slide show speed/repeat playback, press **C (Yellow)**. For details, refer to the following table.

- When using a USB device, the "Delete" function is also available. When you press **C (Yellow)** after selecting folders/files using **B (Green)**, the "Delete" and "Slide Show Menu" selection screen will be displayed.

Slide Show Menu

Slide Show Speed	Setting of slide show playback speed
Repeat Mode Setting	Setting of slide show repeat playback
Guide Display Setting	Guide display setting during still image display

- Press **ENTER** to display the selected file.
 - The selected still image appears on the screen.



- To return to the HOME screen, press **■ STOP**, and then press **HOME** or **EXIT**.

Operational buttons during still image display

Buttons	Description
◀◀ SKIP / ▶▶ SKIP / ▶▶	Go to the previous/next picture in the same directory.
◀◀ REV / ▶▶ FWD	
↺ RETURN	Return to the selection screen.
C (Yellow)	Rotate the picture by 90 degrees to the left.
D (Blue)	Rotate the picture by 90 degrees to the right.
▶ PLAY	Play back Slide Show. <ul style="list-style-type: none"> Return to slide show playback when paused.
 PAUSE	Pause slide show playback.
■ STOP	Stop still image display/slide show playback.
A (Red)	Guide display on/off

NOTE

- Thumbnail data will be displayed when JPEG files from a digital camera contain thumbnail data.
- An icon will be displayed for JPEG files which do not contain thumbnail data.

Accessing DLNA Servers


The player can browse and play movies, music and photos stored on your DLNA Certified media servers connected within your home network.

About a home network

This player can display and play movies, photos and music content from your DLNA-compatible digital media servers (such as a PC and consumer electronics).

Before accessing DLNA servers:

- DLNA servers and this player must be connected to the same local area network. Specify the settings required for connecting this player to the local area network.
- DLNA servers must be turned on.
- When a PC running DLNA server software or other DLNA-compatible devices are connected to this player, some setting changes of software or other devices may be required.
- Please refer to the operating instructions for the software or devices for more information.

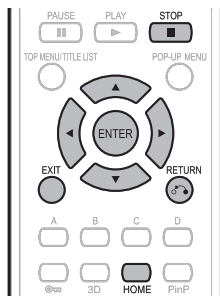

Types of playable files

Video	DivX Plus HD (avi/divx/mkv)
Music	mp3
Picture	jpg

* Playing MKV files via Home Network

To play MKV files via DLNA server, you will need to download and install "DivXInstaller.exe" on a DLNA compatible PC (Windows 7), which can be found on website www.divx.com. Make the necessary settings and confirm that an MKV file can be played using Windows Media Player on a PC prior to attempting playback on the LCD TV.

NOTE

- Even if DLNA compatible, a connection may not be able to be made depending on the server, or playback may not be available even if a connection is made successfully.
- Some files may not be playable depending on the file. For details, refer to pages 10–11.
- To enjoy this function, make a broadband Internet connection to both your PC and this player (See page 19), and then set communication settings (See pages 48–49), then perform the following operation.
- To use this function, we recommend setting "Auto Power Off" to "No". (See page 45.)
- Before using this function, please read "Network Service Disclaimer" (page 65).


Playback by Selecting a File List

- 1 Press ◀/▶ to select Video/Music/Picture, then press ▼ or **ENTER**.
- 2 Press ◀/▶ to select "Home Network", then press ▼ or **ENTER**.




- The player automatically scans and displays DLNA servers within your local network.

- 3 Press ▲/▼ to select a DLNA server which you want to access, then press **ENTER** or ▶.
- The folder list or file list of the DLNA server which you accessed is displayed.

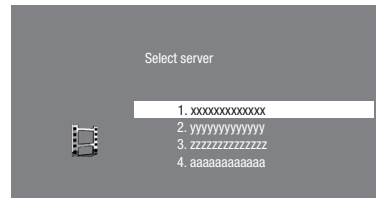

- The previous screen appears when ⏮ **RETURN** is pressed.


- 4 Press ▲/▼ to select the folder or file which you want to access, then press **ENTER**.
- When you select a folder, the file list of the folder is displayed. Press ▲/▼ to select the file which you want to play, then press **ENTER**.
- Playback starts.

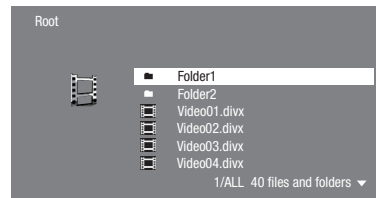

- For operation during playback, refer to pages 37–38.

- 5 Press ■ **STOP** to stop playback.
- The file list reappears.
- The previous screen appears when ⏮ **RETURN** is pressed.
- 6 Press **EXIT** or **HOME** to exit playback.
- The HOME screen reappears.

Playback Functions

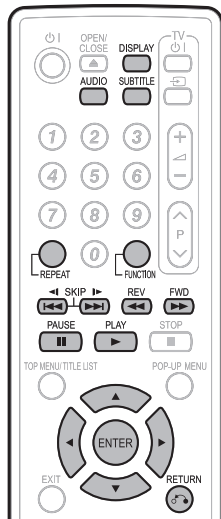

NOTE

- Some operations in the following playback functions cannot be performed depending on the specifications of the disc.

Fast Forward/Reverse (Search)

BD VIDEO BD-R BD-RE

DVD VIDEO DVD-R DVD-RW

AUDIO CD

The Fast Forward/Reverse function is enabled when **◀◀ REV** or **▶▶ FWD** is pressed during playback.

Example: When **▶▶ FWD** is pressed

- The search speed will change each time you press the button.

When playing back a DVD

- You cannot perform Fast Forward/Fast Reverse from one title and continue to another title (except when playing audio CDs). At the end or beginning of the title, Fast Forward/Fast Reverse will be cancelled and normal playback will automatically resume.

NOTE

- Subtitles are not played back with BD/DVD video discs during Fast Forward and Fast Reverse.

Skipping to the Next or the Start of the Current Chapter (Track/Title)

BD VIDEO BD-R BD-RE

DVD VIDEO DVD-R DVD-RW

AUDIO CD CD-R CD-RW USB

The Skipping (to the beginning of a chapter, track or title) function is enabled when **◀◀◀ SKIP/◀** or **▶▶▶ SKIP/▶** is pressed during playback.

Pause/Frame Advance Playback

BD VIDEO BD-R BD-RE

DVD VIDEO DVD-R DVD-RW

The Pause function is enabled when **|| PAUSE** is pressed during playback. (If you are playing back an audio CD, audio data [MP3 files] or still images [JPEG files], these will also pause.)

The Frame Advance Playback function is enabled when **▶▶▶ SKIP/▶** is pressed during pause.

- Frame Advance Playback may not function properly with discs other than DVD-RW/R (VR format).

NOTE

- Some BD/DVD Video discs are not compatible with Pause/Frame Advance Playback.
- Frame Advance/Reverse Playback can be performed for DVD discs by pressing **▶▶▶ SKIP/▶** or **◀◀◀ SKIP/◀** during pause.
- Frame Reverse Playback cannot be performed for DivX video.

Slow Playback (Forward/Reverse)

BD VIDEO BD-R BD-RE

DVD VIDEO DVD-R DVD-RW

The Slow Playback (Forward/Reverse) function is enabled when **▶▶▶ SKIP/▶** or **◀◀◀ SKIP/◀** is pressed for more than 2 seconds during pause. Press **▶ PLAY** to return to normal playback.

NOTE

- This doesn't work for audio CDs.
- You cannot perform Slow Playback between titles. At the end of the title, Slow Playback will be cancelled and normal playback will automatically resume.
- Reverse Slow Playback cannot be performed for BD video and DVD discs in AVCHD format.
- Reverse Slow Playback cannot be performed for DivX video.

Playback Functions

Repeat Playback of a Title or Chapter (Repeat Playback)

BD VIDEO BD-R BD-RE

DVD VIDEO DVD-R DVD-RW

AUDIO CD

- 1 Play back the title or chapter you want to repeat.
- 2 Press **REPEAT**.
- 3 Press **▲/▼** to select the type of Repeat Playback.
 - Playback Title: Repeats the title currently being played back.
 - Playback Chapter: Repeats the chapter currently being played back.
 - Scene Selection: Repeats the specified scene of title or chapter.

Playback Title


Playback Chapter

Scene Selection

NOTE

- Press **↶ RETURN** to cancel without setting the type of Repeat Playback.
- For Audio CD, you can select "Playing Disc", "Playing Track" and "Specify The Part" as Repeat Playback options.
- Repeat Playback cannot be performed for DivX video.

- 4 Press **ENTER**.
Example: Repeat playback of a title (TITLE)

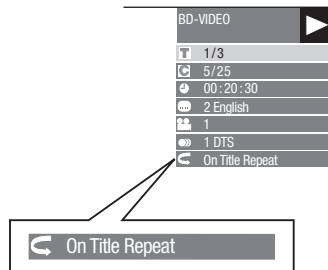

- 5 Press **↶ RETURN** or **FUNCTION** to close the Function Control screen.
 - When you press **REPEAT**, repeat playback will be cancelled.

NOTE

- "Scene Selection" operation is not available for BD video.

Partial Repeat Playback (Repeat Playback of a Specified Part)

DVD VIDEO DVD-R DVD-RW

AUDIO CD

- 1 Press **REPEAT** during playback.
- 2 Press **▲/▼** to select "Scene Selection", then press **ENTER**.
 - "Set Start Point" displays.

Playback Title

Playback Chapter

Scene Selection

Set Start Point

- 3 Press **ENTER** at the scene where you want to set the start point.
 - "Set End Point" displays.
- 4 Press **ENTER** at the scene where you want to set the end point.
 - You can press **▶▶ FWD** to fast forward to the scene where you want to set the end point. When you reach the desired scene, simply press **▶ PLAY** and then **ENTER** to set the end point. To cancel Repeat Playback, press **REPEAT**.

NOTE

- Press **▶▶ SKIP / ▶**, the Repeat Playback is cancelled and the next chapter being played back.
- Press **◀◀ SKIP / ◀** once, the Repeat Playback is cancelled and the player returns to the start of current chapter (track).
- If you press **◀◀ SKIP / ◀** again (within about 5 seconds) the player will skip to the beginning of the previous chapter (track).
- For Partial Repeat Playback, set the start and end points within the same title.
- Repeat Playback may be forbidden depending on the disc.
- Partial Repeat Playback may not work in multi-angle scenes.
- If you press **DISPLAY**, you can confirm the Repeat Playback status.

Playback Functions

Displaying the Audio Information

You can display the audio information on the disc currently being played back by pressing **AUDIO**. The displayed contents vary depending on the disc.

BD VIDEO DVD VIDEO

The audio channel currently being played back will be displayed.

If multiple audio channels are recorded, you can switch the audio channel by pressing **AUDIO**.

DVD-RW DVD-R

When a recorded broadcast with stereo or monaural audio is played back:
“Stereo” is displayed. (Audio cannot be switched.)

NOTE

- When you play a programme recorded in stereo or monaural, and if you are listening to the Bitstream sound via the digital output jack, you cannot select the audio channel. Set “Audio Out” to “PCM” (page 44).
- Settings for audio can also be changed in the Function Control screen (Page 40).
- The operation of audio differs according to each disc. You may need to refer to the operation manual of the disc.
- The display for audio information automatically disappears after 5 seconds.

Switching Subtitles

BD VIDEO DVD VIDEO

If subtitles are provided in multiple languages, you can switch between them.

Press **SUBTITLE** during playback.

- The display indicates the subtitle number currently being played back, and the subtitles appear. Each time **SUBTITLE** is pressed, the subtitles change.
- “-” is displayed if a disc has no subtitles.
- You can also select “Off”.

NOTE

- Settings for subtitles can also be changed in the Function Control screen (Page 40).
- The operation of subtitles differs according to each disc. You may need to refer to the operation manual of the disc.
- The display for subtitle information automatically disappears after 5 seconds.


Switching the Angle

BD VIDEO DVD VIDEO

If multiple angles are recorded, you can switch between them.

- 1 Press **FUNCTION** during playback.
 - The Function Control screen is displayed on the TV.

- 2 Press **▲/▼** to select the Angle Number column, then press **ENTER**.

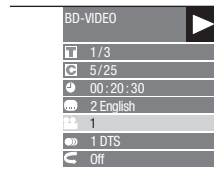

- 3 Press **▲/▼** to select the desired Angle Number, then press **ENTER**.

- 4 Press **↶ RETURN** or **FUNCTION** to close the Function Control screen.

NOTE

- The displayed items vary depending on the disc.
- If you access the Function Control screen during playback of a BD/DVD video, it may be impossible to operate the BD/DVD video playback. In cases like this, close the Function Control screen.
- The operation of angles differs according to each disc. You may need to refer to the operation manual of the disc.
- The display for angle information automatically disappears after 5 seconds.

Displaying the Angle Mark

BD VIDEO DVD VIDEO

You can change settings so that Angle Mark appears in the right bottom part of the screen when multiple angles are recorded. The settings can be changed in “Settings” – “Playback Setting” – “Angle Mark Display” (Page 46).


Settings During Playback

Function Control



This allows you to adjust various settings at once, like subtitles, angle settings and the title selection for Direct Playback. You can adjust the video and audio to suit your preferences. The operations are the same for BD and DVD.

Function Control screen

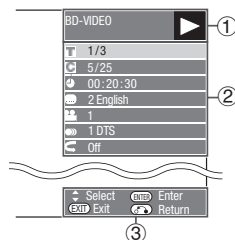

① Playback status display

Shows the operation status and the disc type.

② Setting items


Selects a title (or track) or chapter for playback, or performs video/audio settings.

- Title/Track Number (Direct Title/Track Skip)
- Chapter Number (Direct Chapter Skip)
- Playback Elapsed Time (Direct Time Skip)
- Subtitle Language
- Angle Number
- Audio
- Repeat


③ Operation guide display

Provides help on remote control button operations.

Function Control Operation Procedure

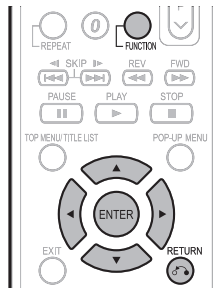

- 1 Press **FUNCTION** during playback.
 - The Function Control screen is displayed on the TV.
- 2 Press **▲/▼** to select the desired setting, then press **ENTER**.
 - For a description of each setting, see "Functions which can be set" (Page 41).

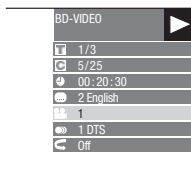

- 3 Press **▲/▼/◀/▶** to set, then press **ENTER**.

- Operations vary depending on the setting. Follow the operation instructions on the screen.

- 4 Press **RETURN** or **FUNCTION** to close the Function Control screen.

NOTE

- If "—" is displayed for an option like title number or subtitles, the disc has no titles or subtitles which can be selected.
- The displayed items vary depending on the disc.
- If you access the Function Control screen during playback of a BD/DVD video, it may be impossible to operate the BD/DVD video playback. In cases like this, close the Function Control screen.

Functions which Can Be Set

Title/Track Number (Direct Title/Track Skip)

- Shows the title number being played back (or track number when playing back an audio CD). You can skip to the start of the title (or track).
- To skip to the start of a selected title (or track), press the **Number** buttons to enter the title (or track) number when this option is highlighted.

Chapter Number (Direct Chapter Skip)

- Shows the chapter number being played back. You can skip to the start of the chapter.
- To skip to the start of a selected chapter, press the **Number** buttons to enter the chapter number when this option is highlighted.

Playback Elapsed Time (Direct Time Skip)

- Shows the time elapsed from the beginning of the current disc title (or track). This lets you skip to a specific time.
- Press **◀/▶** to select the Hour, Minute or Second, then press **▲/▼** or the **Number** buttons to set the time. Press **ENTER** to start playback at the set time.

Subtitle Language

- Shows the currently selected subtitle language. If subtitles are provided in other languages, you can switch to your preferred language.

Angle Number

- Shows the currently selected angle number. If the video is recorded with multiple angles, you can switch the angle.

Audio


- Shows the currently selected type of audio. You can select the desired type of audio.

Repeat

- The current Title (or Chapter) or partial segments can be repeatedly played back. Repeat Playback is also possible with the **REPEAT** button on the remote control.

NOTE

- These functions may not work with all discs.

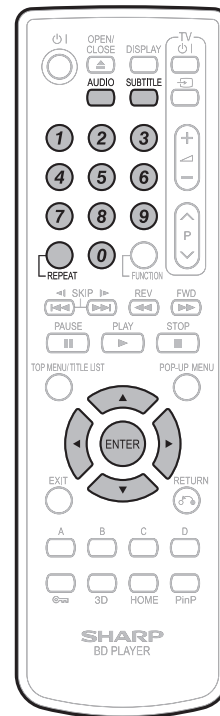


SETTINGS

Common Operations


The “menu” enables various audio/visual settings and adjustments on the functions using the remote control unit. You need to call up the On Screen Display to perform settings for this player. The following is the explanation for the basic operations of the “menu”.

Example: Setting “AQUOS LINK”

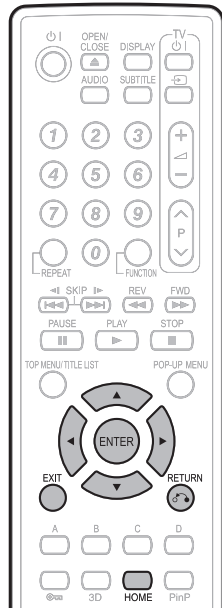

1

 
Home screen display



- ① Press ◀/▶ to select “Settings”, then press ▼ or **ENTER**.
- ② Press ◀/▶ to select “Smart Settings”, then press ▼ or **ENTER**.

2

Select a menu item

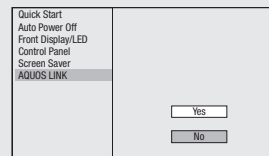

Press ▲/▼ to select “AQUOS LINK”, then press ▶ or **ENTER**.

3

Select the next item

Press ▲/▼ to select the desired item, then press **ENTER**.

Press ↶ **RETURN** to return to the previous “menu” page.

4

Exit the menu screen

Press **HOME** or **EXIT** to exit.

Basic Operation for Playback Setting


Example: Setting "Parental Control" under "Playback Setting"

- 1 Press ◀/▶ to select "Settings", then press ▼ or **ENTER**.
- 2 Press ◀/▶ to select "Playback Setting", then press ▼ or **ENTER**.
- 3 Press ▲/▼ to select "Parental Control", then press ▶ or **ENTER**.
 - When you operate this player for the first time, the PIN code setting screen will be displayed. See "When setting the PIN code for the first time" below.
- 4 Enter your 4-digit PIN code.
 - You cannot move to the next setting screen until you can input the correct PIN code.

When setting the PIN code for the first time.

- ① To set the PIN code for the first time, press ▲/▼ to select "Yes" to enter the PIN code setting menu, then press ▶ or **ENTER**.
- ② Enter a 4-digit number for the PIN code, then the same 4-digit number for confirmation.
- ③ Press **ENTER** to complete the PIN code setting procedure and move to the next setting screen.

- 5 Press ◀/▶ to select the parental control level for DVD VIDEO, BD-ROM, and then select the country code. Press **ENTER** after making each selection.

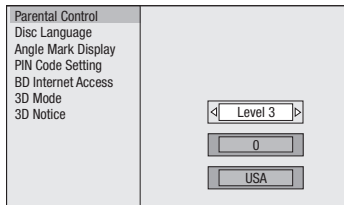

- 6 Press **HOME** or **EXIT** to exit.

SETTINGS

Audio Video Settings

HDMI Video Out

This sets the resolution of the video output for the HDMI terminal of this player.

Normally set to "Auto" (factory preset value).

Item
Auto, 1080p, 1080i, 720p, 576/480p

NOTE

- When the BD player is connected to a 1080p 24Hz compatible TV and the "HDMI Video Out" is set to "Auto", 1080p 24Hz will automatically be displayed when compatible discs are played back.

Secondary Audio

This toggles the clicking sound on the menu and audio with secondary video in picture in picture mode for BD-Video.

- Select "Off" when enjoying the high quality sounds of BD-Video.

Item
On, Off

Audio Out

You can set the audio output when connecting to SURROUND equipment.

- This sets the audio output connected to SURROUND equipment.

Item
HDMI Output: Select this when you connect using HDMI OUT terminal. Digital Output: Select this when you connect using DIGITAL AUDIO OUT terminal (OPTICAL).

- You can set the audio output mode for each output terminal.

- This sets the audio output mode for HDMI OUT terminal when selecting "HDMI Output".

NOTE

- When the secondary audio is set to "On", PCM is automatically selected as the audio output mode.

Item
Bitstream: <ul style="list-style-type: none">Select this when connecting to HDMI equipment with a built-in decoder for DOLBY DIGITAL, etc.Setting to Bitstream will output each audio signal by Bitstream. PCM (Surround): <ul style="list-style-type: none">Select this when connecting to multi-channel HDMI equipment.Setting to PCM (Surround) will output by LINEAR PCM by decoding audio signals recorded in each audio output mode such as DOLBY DIGITAL, DTS.

- This sets the audio output mode for DIGITAL AUDIO OUT (OPTICAL terminal) when selecting "Digital Output".

Item
Bitstream: <ul style="list-style-type: none">Select this when connecting to SURROUND equipment with a built-in decoder for DOLBY DIGITAL, etc.Setting to Bitstream will output each audio signal by Bitstream. PCM: <ul style="list-style-type: none">Select this when connecting to 2 channel stereo audio equipment.Setting to PCM will output by converting each audio signal into PCM 2 channel audio signal.

NOTE

- See page 54 for information on output of audio formats.

SETTINGS

Dynamic Range Control

This lets you adjust the range between the loudest and softest sounds (dynamic range) for playback at average volume. Use this when it is hard to hear dialogue.

Item

Normal: The same audio output range is played as the original recorded audio output range.

Shift*: When Dolby Digital audio is played back, the dynamic range of the audio is adjusted so that the dialogue portion can be heard easily. (If the audio sounds abnormal, set to "Normal".)

Auto: When you play back audio in the Dolby TrueHD format, the dynamic range is automatically adjusted.

* Lower the audio volume before setting. If you do not do so, the speakers may emit a loud sound or excessive output may be applied to the speakers.

SUPER PICTURE

This enhances the quality of video streaming images with pixel by pixel processing technology.

Item

On, Off

Smart Settings

Quick Start

This turns the Quick Start function on and off.

When the Quick Start function is on:

- The startup time of the player is reduced.
- However, power consumption will increase.

When the Quick Start function is off:

- The player will enter the low power consumption mode when in standby condition.

Item

Yes, No

NOTE

- When "Quick Start" is set to "Yes", the player requires some time to turn off.


Auto Power Off

This sets the player so that power is automatically shut off if playback is stopped and you do not perform any operations for about 10 minutes.

Item

Yes, No

Front Display/LED

If you feel that the indicators on the player's front display are too bright when watching movies, you can turn them off except for the  (On/Standby) indicator.

You can also adjust the brightness of the front display/LED light by selecting "Dimmer".

Item

On, Dimmer, Off

NOTE

- When "Dimmer" is selected, the BD/DVD/CD mode indicator turns off.

Control Panel

This lets you set display of the control panel on the TV screen to on or off.

Item

Yes, No

Screen Saver

This function helps prevent burn-in on the TV screen by leaving the player with the power turned on for a long period of time.

Item

Yes, No

AQUOS LINK

This lets you set the player to receive the control signal from the AQUOS LINK remote control via the HDMI cable.

Item

Yes, No

NOTE

- For details, refer to the operation manual of TV.

SETTINGS

Playback Setting

Parental Control

This lets you set the Parental Control depending on the disc content. The available Parental Control Levels are shown below.

The 4-digit PIN code number needs to be entered before the Parental Control Levels and the Country Code are set. The Parental Control Levels and the Country Code cannot be set if a PIN code has not been created or the PIN code is not entered.

- Select the rating level appropriate for the age of the user.

Item (Parental control level for DVD-video)

8 and Off: All DVD-video can be played.

1-7: Prohibits play of DVD-video with corresponding ratings recorded on them.

Item (Parental control level for BD-video)

No Limit: All BD-video can be played.

0-99 year(s): Prohibits play of BD-video with corresponding ratings recorded on them.

Item (Country code)

Select the country code.

The ratings differ according to the country.

NOTE

- Refer to "Basic Operation for Playback Setting" on page 43 for details.

Disc Language (Disc Priority Language)

This lets you select the language for subtitles, audio and menus displayed on the screen.

Item (Subtitle)

Select the subtitle language you want to display.

Item (Audio)

Select the audio language you want to hear.

Item (Menu)

Select the menu language you want to display.

NOTE

- When "Auto" is selected, the priority language of the disc will be played back.

Angle Mark Display

This lets you turn the Angle Mark Display on or off when BD/DVD video recorded with multiple angles is played back. (The Angle Mark is displayed in the lower right screen.)

Item

Yes, No

PIN Code Setting

This sets the PIN code for setting or changing the Parental Control Level.

Item

Yes: Enter the 4-digit number.

No

NOTE

- When you forget the PIN code, you can reset the current PIN code using "System Reset" under "Settings". (See page 47.)
- You can also set the new PIN code if desired.

BD Internet Access

This allows you to set access restriction to BD-LIVE contents.

Item

Permit: Allows all BD-LIVE discs.

Limit: Allows only discs with owner certification.

Prohibit: Prohibits all BD-LIVE discs.

NOTE

- The available functions differ depending on the disc.
- Regarding playback method of BD-LIVE contents, etc., perform the operations in accordance with the instructions in the BD disc manual.
- To enjoy BD-LIVE functions, perform the broadband Internet connection (page 19) and communication settings (pages 48-49).

SETTINGS

3D Mode

This sets output of 3D images.
To view 3D images, playback of 3D content (3D BD video) is necessary with a 3D compatible TV and 3D glasses in addition to this player.

Item

Auto: Video signals are output as 3D when 3D content (3D BD video) is played or as 2D when 2D content is played.

2D: Even if 3D content (3D BD video) is played, video signals are output as 2D at all times.

CAUTION

- When viewing 3D images, viewing for a long period of time or lying on your back may cause eye strain and discomfort. In addition, 3D images may affect the eyesight of young children/infants, so keep them from viewing the images.

3D Notice

This sets whether or not a notice is displayed on the connected TV every time 3D content (3D BD video) is played.

Item

Yes, No

System

Version

When you select "Version", the system software version is displayed.

On Screen Language

You can set the language you want to display on the screen.

Item

English, 简体中文, 繁體中文

DivX(R) Registration

The DivX registration code is displayed.

NOTE

- To learn more, visit www.divx.com/vod.

DivX(R) Deregistration

You can deactivate your DivX information on the player.

Item

Yes, No

NOTE

- To learn more, visit www.divx.com/vod.

System Reset

You can reset all settings to the factory presets.

Item


Reset, Not Reset

Communication Setup

This allows you to perform and/or change the communication settings. This setting is required to use BD-LIVE functions, video on demand services (e-Contents), home networks and software updates that connect to the Internet.

NOTE

- Make sure that the LAN cable is connected to this player. (See page 19.)
- For manually performing the setting, the following information of the connected router or modem is required. Confirm the information prior to the setting.
– IP address, netmask, gateway, DNS address

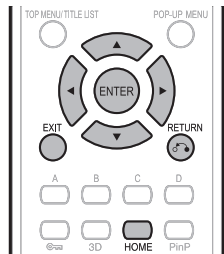

- 1 Press **◀/▶** to select “Settings”, then press **▼** or **ENTER**.
- 2 Press **◀/▶** to select “Communication Setup”, then press **▼** or **ENTER**.
- 3 Press **▶** or **ENTER** to move to the menu to the right.
- 4 Press **▲/▼** to select “Change”, then press **ENTER**.

Setting the info. of the Ethernet
[Current Setup]

IP Address : Auto Setup
Netmask : Auto Setup
Gateway : Auto Setup
DNS : Auto Setup

Change
Initialize

- For initializing the current setting, select “Initialize”, then press **ENTER**.

- 5 For setting the IP address, press **◀/▶** to select “Yes” or “No”, then press **ENTER**.

Do you obtain the IP address automatically?

Yes **No**

IP Address : [] . [] . [] . []
Netmask : [] . [] . [] . []
Gateway : [] . [] . [] . []

Next

- If selecting “Yes”: The IP address is automatically obtained.
- If selecting “No”: The IP address, netmask and gateway are manually entered using the screen for inputting characters. (See page 49.)
Regarding each of the setup values, confirm the specifications of your broadband router.

- 6 Select “Next”, then press **ENTER**.
• If selecting “Yes” in the step 5, go to the step 9.
- 7 Enter your DNS address.

Enter your DNS address.

Primary : [] . [] . [] . []
Secondary : [] . [] . [] . []

Next

- The primary and secondary DNS addresses are entered using the screen for inputting characters. (See page 49.)

Regarding each of the setup values, confirm the specifications of your broadband router.

- 8 Select “Next”, then press **ENTER**.
- 9 For testing the connection to the Internet, after confirming the settings, press **▲/▼** to select “Test”, then press **ENTER**.
• “Test” is available only when setting to obtain the IP address automatically. “Test” cannot be selected if the IP address has not been obtained automatically.

Confirm the current setting.

IP Address : xxx xxx xxx xxx
Netmask : xxx xxx xxx xxx
Gateway : xxx xxx xxx xxx
DNS Address : xxx xxx xxx xxx
xxx xxx xxx xxx
MAC Address : xx xx xx xx xx xx

Test
Complete

- As a result of the test, if the Internet connection fails, enter the setup values manually.

- 10 Press **▲/▼** to select “Complete”, then press **ENTER**.

 
- 11 Press **HOME** or **EXIT** to return to the HOME screen.

- To perform other settings, press **RETURN**.


The Operation Procedure for Inputting Characters Manually

NOTE

- Numeric characters such as IP address can be entered on the input screen either by selecting each of the characters in the “Numeric” mode or using the **Number** buttons on the remote control.




1 Press **ENTER** at the boxes in which characters are to be entered, and the input screen will appear.

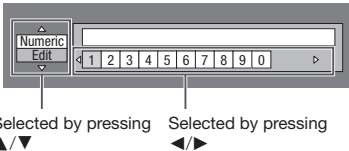

2 Press **▲/▼** to select the desired input mode.
3 Press **◀/▶** to select a number, then press **ENTER**.

4 Repeat the step 3 to display all of the desired numbers in the input field.

 
Example: The screen for inputting numeric characters



NOTE

- Press **RETURN** (Del.Char.) to delete a number you have input.
- To change a number you have input, press **B** (Green) (Left) or **C** (Yellow) (Right) to select the number you want to change, and press **RETURN** (Del.Char.). Then, press **◀/▶** to select a new number you want to input, and press **ENTER**.

 5 Press **D** (Blue) (Complete) to fix the numbers which have been input.



6 Repeat step 1 to 5 to finish inputting all the required characters.

Input character list

Numeric	1 2 3 4 5 6 7 8 9 0									
Edit	Cancel	Left	Right	Complete	Del.Char.	The same operation as the coloured buttons and RETURN can be performed by selecting each of the items and pressing ENTER . “Del.Char.” stands for deleting characters.				

SETTINGS

Before using the USB device (USB HDD, USB memory device)

CAUTION:

- Do not remove the USB device or unplug the AC cord while the operations for “USB (HDD/Memory) Management” or “Software Update Settings (Manual Update from USB memory device)” are being performed.
- Do not use a USB extension cable and/or hub when connecting a USB device to the player's USB1 or USB2 terminal.
– Using a USB extension cable and/or hub may prevent the player from performing correctly.

NOTE:


- SHARP cannot guarantee that all brands' USB devices will operate with this player.
 - If a USB device is formatted on any equipment other than this player, it may be partially or totally unavailable. It is recommended to format the device on this player.
- See page 18 regarding USB HDD formats.

USB (HDD/Memory) Management

The following instructions explain how to delete data such as the Virtual Package data and the BD-LIVE data in a USB device and also initialise all data in the USB device.

NOTE

- When you insert or remove a USB device, be sure to turn off the main power of this player and the USB device (only if connecting a USB HDD) and make sure that “Quick Start” is set to “No” (See page 45).
- When you perform the “Erase” operation, data which has been saved to the player's internal memory (game score, etc.) will also be deleted.

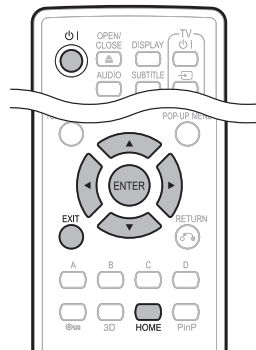

- 1 Insert the USB device into the player's USB terminal.

Example: Front*




USB device

- * A USB terminal is also available on the rear side (USB1 terminal).
- 2 Press **POWER** to turn on the player.
- 3 Press **ENTER** to select “Settings”, then press **DOWN** or **ENTER**.
- 4 Press **LEFT** to select “USB (HDD/Memory) Management”, then press **DOWN** or **ENTER**.
 - The “USB (HDD/Memory) Management” screen is displayed.
 - “No USB Memory” appears when no USB is inserted.


- 5 Press **ENTER** to move to the next screen.
- 6 Press **UP**/**DOWN** to select “Erase” or “Format”, then press **ENTER**.

Erase: Deletes only BD-VIDEO data written on the USB device such as BD-LIVE data.

Format: Be aware that all data including BD-VIDEO data and software update data will be deleted.

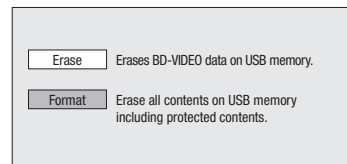

- If you want to delete only the unneeded software update data after the software is updated, delete the data on the USB device using a PC.
- 7 Press **UP**/**DOWN** to select “Yes”, then press **ENTER**.
 - A confirmation message is displayed. Check that the correct USB device is displayed, and then continue.
 - 8 Press **UP**/**DOWN** to select “USB1” or “USB2”, then press **ENTER**.
 - When only one USB device is connected to this player, this selection screen does not appear. In such cases, after step 7, proceed to step 9.
 - 9 Start the process.
 - The screen for the current operation will display.

 

- 10 Press **ENTER**.
- 11 Press **HOME** or **EXIT** to exit.

SETTINGS

Software Update Settings

In this player, the software version can be updated using either one of the following methods.

- Auto Update from Network
- Manual Update from Network
- Manual Update from USB memory device (customer service representatives only)

Auto Update from Network

This function allows you to perform the update by accessing an Internet connection automatically to check if there is a new firmware version every time the player is turned on.


When using this function, it is required to perform the following settings in advance.

NOTE

- Make sure that the LAN cable is connected to this player. (See page 19.)
- Make sure to perform the communication settings. (See pages 48–49.)
- It may take time to access and download the update depending on the Internet connection and other factors.

CAUTION

- Do not remove the LAN cable or unplug the AC cord while downloading or updating software.

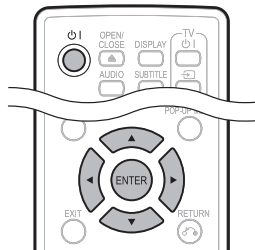

Setup

- 1 Press **◀/▶** to select “Settings”, then press **▼** or **ENTER**.
- 2 Press **◀/▶** to select “Software Update Settings”, then press **▼** or **ENTER**.
- 3 Press **▲/▼** to select “Auto Update Setting”, then press **▶** or **ENTER**.
- 4 Press **▲/▼** to select “Yes”, then press **ENTER**.
 - After this, an Internet connection will be made automatically every time this player is turned on.

Update process

- 1 When this player is turned on, the Internet connection starts automatically.

- “Accessing...” blinks on the screen.



- The current version of this unit software and the latest version of the update file on the network are displayed when latest version of firmware has been found.

To update this player software with update file, select “Yes”, and go to step 2.

 
Latest version of firmware has been found.
Firmware update is available.
Proceed with update?
Current Version : xxxxxxxxxx
Latest Version : yyyyyyyyyy
If “Yes” will be selected, version update will start.

Yes
No

- If the latest firmware version has been already updated, nothing is displayed on the screen.

- 2 Press **ENTER** to start updating.

Downloading latest firmware...
Version : yyyyyyyyyy



- 3 When the software is successfully updated, a screen is displayed indicating that the update process is completed.
 - If the update has failed, an error message appears. Retry the update after checking if the broadband Internet connection (page 19) and communication settings (pages 48–49) are performed properly.
- 4 Press **⏻** to turn off the player before using again.

Manual Update from Network


This function allows you to perform the update operation by accessing an Internet connection manually to check if there is a new firmware version.

NOTE

- Make sure that the LAN cable is connected to this player. (See page 19.)
- Make sure to perform the communication settings. (See pages 48–49.)
- It may take time to access and download the update depending on the Internet connection and other factors.

CAUTION

- Do not remove the LAN cable or unplug the AC cord while downloading or updating software.

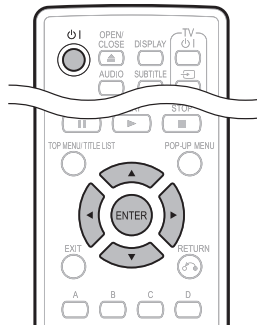

- 1 Press **◀/▶** to select “Settings”, then press **▼** or **ENTER**.
- 2 Press **◀/▶** to select “Software Update Settings”, then press **▼** or **ENTER**.
- 3 Press **▲/▼** to select “Manual Update”, then press **▶** or **ENTER**.
- 4 Press **▲/▼** to select “Network”, then press **ENTER**.
- 5 During access to the network and checking the latest version of firmware, “Accessing” blinks.
 - The current version of this unit software and the latest version of the update file on the network are displayed when latest version of firmware has been found.


To update this player software with update file, select “Yes”, and go to step 6.

Latest version of firmware has been found.
Firmware update is available.
Proceed with update?
Current Version : xxxxxxxxxx
Latest Version : yyyyyyyyyy
If “Yes” will be selected, version update will start.

Yes
No

- If the Internet connection has failed, an error message appears.
Retry the update after checking if the broadband Internet connection (page 19) and communication settings (pages 48–49) are performed properly.

- 6 Press **ENTER** to start updating.

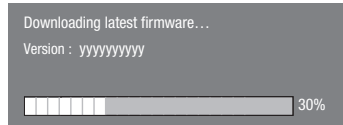


- 7 When the software is successfully updated, a screen is displayed indicating that the update process is completed.
 - If the update has failed, an error message appears.
Retry the update after checking if the broadband Internet connection (page 19) and communication settings (pages 48–49) are performed properly.
- 8 Press **⏻** to turn off the player.

SETTINGS

Manual Update from USB Memory Device

The software update function using a USB memory device is only for customer service representatives.

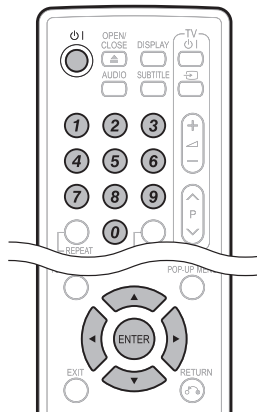


CAUTION

- Do not remove the USB memory device or unplug the AC cord while the software is being updated.

When you insert or remove a USB memory device, be sure to turn the main power off and make sure that “Quick Start” is set to “No” (See page 45).


- Insert the USB memory device with the update file into the USB1 or USB2 terminal on this player.
 - It is recommended that the USB memory device be connected to the USB2 terminal on the front of the player.

Front

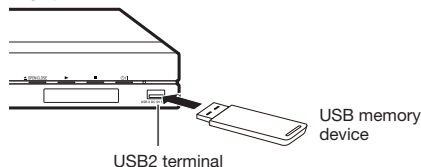


- Press **POWER** to turn on the power.
- Press **LEFT/RIGHT** to select “Settings”, then press **DOWN** or **ENTER**.
- Press **LEFT/RIGHT** to select “Software Update Settings”, then press **DOWN** or **ENTER**.
- Press **UP/DOWN** to select “Manual Update”, then press **RIGHT** or **ENTER**.
- Press **UP/DOWN** to select “USB Memory”, then press **ENTER**.
- If you have not yet set the PIN code, go to step 8.

 
- Enter the 4-digit number using 0–9.



 
- Press **ENTER** to start checking data in the USB memory device.



 - During the data checking, “Checking” blinks.



- The current version of this unit software and the version of the update file on the USB memory device are displayed. To update this player software with update file, select “Yes”, and press **ENTER**.

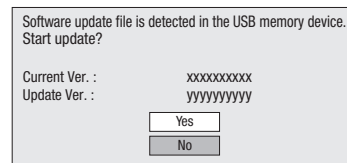

SETTINGS

- If the USB memory device is not properly installed or the correct update file cannot be found on the USB memory device, an error message is displayed.
Check the file on the USB memory device, and then reinsert the USB memory device correctly.

Software update file is not detected in the USB memory device.
Confirm that you have transferred the file to the USB memory device and retry software update.
Confirm that you have inserted the USB memory device into the correct device.

OK

There is more than one software file in the USB memory device.
Confirm that only the software update file is in the USB memory device.

OK

10 Press **ENTER** to start updating.

- The screen becomes dark for a while until the update screen can be displayed. Please wait for the update screen to appear. Do not unplug the AC cord.

The picture will temporarily go dark until the software update display appears.
Wait several minutes and do not unplug the AC cord.

OK



Now updating

- Do not unplug AC cord.

Update Version yyyyyyyyyy



30%

11 When the software is successfully updated, a screen is displayed indicating that the update process is completed.

- If the update has failed, check the file in the USB device and try Software Update again.

12 Press **⏻** to turn off the player.

- Delete unneeded software update data using a PC after the software update process is completed.

13 Remove the USB memory device.

About Output of Audio Formats

Audio format	Maximum number of channels	HDMI		DIGITAL OUT	
		PCM	Bitstream	PCM	Bitstream
Dolby TrueHD	7.1ch (48kHz/96kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
	5.1ch (192kHz)	5.1ch *3	5.1ch *4	2ch *2	5.1ch *1/*3
Dolby Digital Plus	7.1ch (48kHz)	7.1ch	7.1ch *4	2ch *2	5.1ch *1/*3
	7.1ch (48kHz/96kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
DTS-HD Master Audio	7.1ch (48kHz/96kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
	5.1ch (192kHz)	5.1ch *3/*5	5.1ch *4	2ch *2	5.1ch *1/*3
DTS-HD High Resolution Audio	7.1ch (48kHz/96kHz)	7.1ch *3	7.1ch *4	2ch *2	5.1ch *1/*3
	5.1ch (192kHz)	5.1ch *3	—	2ch *2	—
LPCM	7.1ch (48kHz/96kHz)	7.1ch *3	—	2ch *2	—
	5.1ch (192kHz)	5.1ch *3	—	2ch *2	—

*1 Core only

*2 Down mixed

*3 When "Secondary Audio" is set to "On", the audio is output as 48kHz.

*4 When "Secondary Audio" is set to "On", the audio is output as PCM.

*5 When 5.1ch (192kHz), the audio output is downsampled to 96kHz.

*6 When 2ch, the audio is output as 192kHz.

Playing Back Video On Demand Streaming Content

In this player, you can enjoy a variety of video on demand streaming content by connecting to the Internet.



VOD content

VOD content

YouTube

- Playing back YouTube video content streaming

NOTE

- To enjoy this function, make a broadband Internet connection to both your PC and this player (See page 19), and then set communication settings (See pages 48–49), then perform the following operation.
- To use this function, we recommend setting “Auto Power Off” to “No” before starting the registration. (See page 45.)
- Before using this function, please read “Network Service Disclaimer” (page 65).

Playing Back YouTube Content

This player can play back YouTube video content streaming through the Internet.

- For more information about YouTube, see the YouTube website using a PC (<http://www.youtube.com>).

NOTE

- Some video content may not be played back with this player.
- The actual functions which can be operated may differ from the descriptions shown.
- It may take time to access and download the update depending on the Internet connection and other factors.

Playing back

- 1 Press ◀▶ to select “e-Contents”, then press ▼ or ENTER.
- 2 Press ◀▶ to select “YouTube”, then press ▼ or ENTER.
 - The YouTube screen is displayed.
- 3 Follow the instruction on the screen.
- 4 To exit the screen, press EXIT.

Operational buttons for playback control

Item	
	Pause the video content. To resume playing paused content, press ▶ on the playback controls.
	Skip to the previous video content on the video list.
	Skip to the next video content on the video list.
	Fast reverse (search).
	Fast forward (search).

Troubleshooting

The following problems do not always suggest a defect or malfunction of this player.
Refer to the problems and lists of possible solutions below before calling for service.

Power

Problem	Possible causes and solutions
The player power cannot be turned on.	<ul style="list-style-type: none"> Is the power cord firmly plugged into the AC outlet? (Page 20) When the power cord is plugged into an AC outlet, press and hold ⏻ on the player until “r E S E L” appears on the front panel display. Then, after the ⏻ (On/Standby) indicator is lit, turn on the power. (Page 59) Press ⏻ after the ⏻ (On/Standby) indicator turns on. (Page 21)
The player power is turned off.	<ul style="list-style-type: none"> Is “Auto Power Off” set to “Yes”? When “Auto Power Off” is set to “Yes”, the power will be automatically turned off after 10 continuous minutes of inactivity (no playback). (Page 45)

Basic Operation

Problem	Possible causes and solutions
The remote control does not work.	<ul style="list-style-type: none"> Use the remote control within its operating range. (Page 20) Replace the batteries. (Page 20) Reset the remote control. <ul style="list-style-type: none"> Press and hold 1 (the number button) first and then ENTER on the remote control together for more than 5 seconds.
Cannot operate the player.	<ul style="list-style-type: none"> Are you operating the player within the specified operating temperature range? (Page 61)

Playback

Problem	Possible causes and solutions
The player cannot play a disc.	<ul style="list-style-type: none"> Take out the disc and clean it. (Page 13) Make sure that the disc is loaded properly (aligned in disc tray and label-side up). (Page 25) Make sure that region code on the disc matches that of this player. (Page 9) Allow any condensation in or near the player to dry. (Page 13) Check that the disc is recorded in the compatible TV system (PAL or NTSC). The player cannot play back video which was not recorded normally. (Page 10) Proper playback may be impossible due to the state of the disc recording, a scratched, warped or dirty disc, the state of the pick-up, or compatibility issues between this player and the disc being used. (Pages 10, 13) When the recorded time of a disc is unusually short, playback may not be possible. BD-RE/R discs recorded in a format other than BDMV/BD-RE cannot be played back. (Page 9)
The disc is automatically ejected after closing the disc tray.	<ul style="list-style-type: none"> Make sure that the disc is loaded properly (aligned in disc tray and label-side up). (Page 25) Take out the disc and clean it. (Page 13) Make sure that the disc is playable. (Page 9)

Troubleshooting

Playback (Continued)

Problem	Possible causes and solutions
Video stops.	<ul style="list-style-type: none">• Has the player been subjected to shock or impact? Are you using it in an unstable location? The player will stop if it senses shock or vibration.
The player makes a snapping sound when starting playback or loading a disc.	<ul style="list-style-type: none">• The player may sometimes make a snapping sound when starting playback if it has not been operated in a while. These sounds are not malfunctions of the player but are normal operating conditions.

Picture

Problem	Possible causes and solutions
No picture.	<ul style="list-style-type: none">• Make sure that the cable is connected correctly. (Page 16)• Make sure that the connected TV or the AV receiver is set to the correct input. (Pages 16–17)• Take out the disc and clean it. (Page 13)• Make sure that region code on the disc matches that of this player. (Page 9)• There is no picture from the HDMI output.<ul style="list-style-type: none">– Are the settings performed correctly? Please check the settings. (Page 44)
Screen freezes and operation buttons do not work.	<ul style="list-style-type: none">• Turn off the power and turn on the power again.• If the power is not turned off, perform a reset. (Page 59)• Is the disc damaged or dirty? Check the condition of the disc. (Page 13)
Square noise (mosaic) appears on the screen.	<ul style="list-style-type: none">• Blocks in images may be visible in scenes with rapid movement due to the characteristics of digital image compression technology.
Audio is not output, or images are not played back properly.	<ul style="list-style-type: none">• The audio may not be output or the images may not be played back properly for some discs in which copyright-protected contents are recorded. (Pages 10–11)
3D images cannot be output to a TV.	<ul style="list-style-type: none">• Is an HDMI cable used?• Are a 3D compatible TV and 3D glasses used?• Is a proper connection made between the HDMI OUT terminal of the player and the HDMI input terminal of the 3D compatible TV? (Page 16)• Are all devices (amplifier, AV receiver, etc.) between the TV and the player connected by HDMI and 3D compatible? (Pages 16–17)• Is the 3D setting on this player correct? (Pages 23, 47)• Is the 3D setting on the TV correct?• Is a 3D compatible BD disc being played back?
Noise appears on the screen.	<ul style="list-style-type: none">• When you watch TV broadcasts with the power of this player turned on, noise may appear on the TV screen. In such cases, turn off the power of this player or keep this player away from the TV.

Troubleshooting

Sound

Problem	Possible causes and solutions
No sound, or sound is distorted.	<ul style="list-style-type: none">• If the volume of the TV or amplifier is set to minimum, turn the volume up.• There is no sound during still mode, slow motion playback, fast forward and fast reverse. (Page 37)• Check that the HDMI cable and/or optical digital cable is connected correctly. (Page 17)• Check that the cable plugs are clean.• Take out the disc and clean it. (Page 13)• Audio may not be output depending on the audio recording status, such as when audio other than an audio signal or non-standard audio is recorded for the audio content of the disc. (Page 10)
Audio is not output, or images are not played back properly.	<ul style="list-style-type: none">• The audio may not be output or the images may not be played back properly for some discs in which copyright-protected contents are recorded.

Network

Problem	Possible causes and solutions
Cannot connect to the Internet.	<ul style="list-style-type: none">• Is the LAN cable connected properly? (Page 19)• Is the wrong cable such as a modular cable used? Connect a LAN cable to the ETHERNET terminal. (Page 19)• Is the power for the connected equipment, such as a broadband router or modem turned on?• Is the broadband router and/or modem properly connected?• Is the proper value(s) set in the network setting? Check "Communication Setup". (Pages 48–49)
Cannot download BD-LIVE contents.	<ul style="list-style-type: none">• Is the LAN cable connected properly? (Page 19)• Is the USB device properly connected? Check that the USB device is connected to the USB1 or USB2 terminal of this player. (Page 27)• Check if the BD disc supports BD-LIVE.• Check the setting for "BD Internet Access". (Page 46)

Other


Problem	Possible causes and solutions
The TV operates incorrectly.	<ul style="list-style-type: none">• Some TVs with wireless remote control capability may operate incorrectly when using the remote control of this player. Use such TVs away from this player.
The player heats up during use.	<ul style="list-style-type: none">• When using this player, the console cabinet may heat up depending on the usage environment. This is not a malfunction.
⏻ (On/Standby) indicator will remain lit.	<ul style="list-style-type: none">• When the AC cord is removed from the outlet, the ⏻ (On/Standby) indicator will remain lit for a short period. This is normal and is not a malfunction.

Troubleshooting

To Reset this Player

- If this player receives strong interference from a source such as excessive static electricity, strong external noise, malfunction of power supply, or voltage caused by lightning during use or a wrong operation is sent to the player, errors like the player not accepting an operation may occur.

Press and hold **⏻/|** on the player until "rESEt" appears on the front panel display when the player does not operate properly even after the power has been turned off. Then, after the **⏻/|** (On/Standby) indicator is lit, turn on the power.

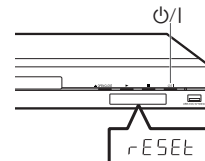

- When a reset is performed while the power is on, the player will turn off. Turn the power on again. At this point, it may take a few moments for the system processing to finish before the player is ready for use. During the system processing, the BD/DVD/CD mode indicator on the front panel display of the player will blink. Once the system processing has finished, the indicator will finish blinking and then light up normally. You can operate the player when the BD/DVD/CD mode indicator is lit.
- Since all settings including the language setting stored in memory are also reset when a reset has been performed, they must be set again.
- When the problem persists even after performing a reset, unplug the AC cord and plug it in again. If this does not solve the problem, contact the nearest service centre approved by SHARP.

On-screen Error Messages

The following messages appear on the TV screen in case of an error during operation.

Error message	Possible Error	Suggested Solution
Cannot play.	<ul style="list-style-type: none">• The disc cannot be played back with this player.	<ul style="list-style-type: none">• Check the disc, and load it correctly.
Incompatible disc.	<ul style="list-style-type: none">• If you load a disc which cannot be played with this player (i.e. a scratched disc), or if you load a disc upside down, this message will appear, and the disc tray will automatically pop out.	<ul style="list-style-type: none">• Remove the disc.
	<ul style="list-style-type: none">• Occurs if the loaded disc cannot be played because it is a non-standard disc or scratched, etc.	
Cannot operate.	<ul style="list-style-type: none">• Occurs if an operation is incorrect.	_____
This USB memory is not formatted properly. Please format the memory in USB memory management.	<ul style="list-style-type: none">• Occurs if there is a formatting error.• Occurs if the USB memory is not formatted with FAT 32/16.	<ul style="list-style-type: none">• Format the USB memory again.• Format the USB memory with your PC.
The Connected USB Memory cannot be used. It should be compliant with USB 2.0	<ul style="list-style-type: none">• Occurs if USB memory not compliant with USB 2.0 High Speed (480 Mbps) is used (i.e. USB 1.0/USB 1.1).	<ul style="list-style-type: none">• Connect USB 2.0 High Speed (480 Mbps) compliant USB memory.

NOTE

Cinavia Notice

- This product uses Cinavia technology to limit the use of unauthorised copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorised copy is detected, a message will be displayed and playback or copying will be interrupted.
- More information about Cinavia technology is provided at the Cinavia Online Consumer Information Centre at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Centre, P.O. Box 86851, San Diego, CA, 92138, USA.

List of File Formats Compatible with USB Mode

USB device	USB Memory
File system	FAT/FAT32

Format	Container/File extension
Photo file format	JPEG (.jpg)
Music file format	MP3 (.mp3)

Format	Container/File extension	Video	Audio
Video file format	AVI (.avi) DivX HD (.divx)	MPEG4 SP MPEG4 ASP	MP3 (MPEG Audio Layer 3) MP2 (MPEG Audio Layer 2) AC3
	MKV (.mkv)	H.264 (MPEG4 AVC)	MP3 (MPEG Audio Layer 3) AAC/LC, AAC/HEv1, AAC/HEv2 AC3

Specifications

Specifications are subject to change without notice.

General

Power supply	AC 100–240 V, 50/60 Hz
Power consumption (Normal)	15 W (AC 240 V, 50 Hz)
Power consumption (Standby)	Approx. 0.2 W (AC 240 V, 50 Hz) (When “Quick Start” is set to “No”)
Dimensions	Approx. 430 mm × 49 mm × 178 mm (W × H × D)
Weight	Approx. 1.5 kg
Operating temperature	5°C to 35°C
Storage temperature	–20°C to 60°C
Operating humidity	10 % to 80 % (no condensation)
TV systems	PAL system/NTSC system (The system recorded on the disc is output.)

Playback

Playable discs/media formats	BD-ROM, BD-RE, BD-R, DVD Video, DVD+RW/+R/-RW/-R (Video/VR/AVCHD/JPEG file/MP3 file/DivX (H.264/MKV) format), Audio CD (CD-DA), CD-RW/R (CD-DA/JPEG file/MP3 file format) USB device (USB HDD, USB memory device) (JPEG file/MP3 file/DivX (H.264/MKV) format)
Region code	A or ALL for BD, 3 or ALL for DVD

Input/Output

HDMI output	HDMI 19-pin standard connector (1080p 24Hz output) HDMI® (Deep Colour, x.v.Colour, Dolby TrueHD, DTS-HD Master Audio Essential)
Digital audio optical output	Terminal: Square Optical terminal
USB input	USB1/USB2 USB 2.0 High Speed (480 Mbps) correspondence (for Local storage/Software update/JPEG, MP3 and DivX (H.264/MKV) playback)
ETHERNET	10BASE-T/100BASE-TX

Glossary

AVCHD (page 9)

AVCHD (Advanced Video Codec High Definition) refers to a recording format (specification) for digital video cameras which can record to a disc such as 8 cm DVD disc and play back digital high definition images.

BDAV (page 9)

BDAV (Blu-ray Disc Audio/Visual, BD-AV) refers to one of the application formats used for writable Blu-ray discs such as BD-R, BD-RE, etc. BDAV is a recording format equivalent to DVD-VR (VR mode) of the DVD specifications.

BD-J application

The BD-ROM format supports Java for interactive functions. “BD-J” offers content providers almost unlimited functionality when creating interactive BD-ROM titles.

BD-LIVE (page 28)

A variety of interactive content is available from BD-LIVE compatible Blu-ray discs via the Internet.

BDMV (page 9)

BDMV (Blu-ray Disc Movie, BD-MV) refers to one of the application formats used for BD-ROM which is one of the Blu-ray Disc specifications. BDMV is a recording format equivalent to DVD-video of the DVD specification.

BD-R (pages 9, 25)

A BD-R (Blu-ray Disc Recordable) is a recordable, write-once Blu-ray Disc. Since contents can be recorded and cannot be overwritten, a BD-R can be used to archive data or for storing and distributing video material.

BD-RE (pages 9, 25)

A BD-RE (Blu-ray Disc Rewritable) is a recordable and rewritable Blu-ray Disc.

BD-ROM

BD-ROMs (Blu-ray Disc Read-Only Memory) are commercially produced discs. Other than conventional movie and video contents, these discs have enhanced features such as interactive content, menu operations using pop-up menus, selection of subtitle display, and slide shows. Although a BD-ROM may contain any form of data, most BD-ROM discs will contain movies in High Definition format for playback on Blu-ray Disc players.

Blu-ray Disc (BD) (page 9)

A disc format developed for recording/playing high-definition (HD) video (for HDTV, etc.), and for storing large amounts of data. A single layer Blu-ray Disc holds up to 25 GB, and a dual-layer Blu-ray Disc holds up to 50 GB of data.

Chapter number (pages 40, 41)

Sections of a movie or a music feature that are smaller than titles. A title is composed of several chapters. Some discs may only be comprised of a single chapter.

Control Panel (page 24)

This function allows you to operate this player using the TV remote control by displaying the control panel on the TV screen.

Copy guard

This function prevents copying. You cannot copy discs marked by the copyright holder with a signal which prevents copying.

Deep Colour

Deep Colour can reproduce rich colours, increasing the number of bits describing colours. This player is compatible with Deep Colour. You can enjoy this function by connecting to a Deep Colour compatible TV using an HDMI cable.

Disc menu (page 26)

This lets you select things like the subtitle language or audio format using a menu stored on the DVD video disc.

Dolby Digital

A sound system developed by Dolby Laboratories Inc. that gives movie theatre ambience to audio output when the product is connected to a Dolby Digital processor or amplifier.

Dolby Digital Plus (page 54)

A sound system developed as an extension to Dolby Digital. This audio coding technology supports 7.1 multi-channel surround sound.

Dolby TrueHD (page 54)

Dolby TrueHD is a lossless coding technology that supports up to 8 channels of multi-channel surround sound for the next generation optical discs. The reproduced sound is true to the original source bit-for-bit.

DTS

This is a digital sound system developed by DTS, Inc. for use in cinemas.

DTS-HD High Resolution Audio (page 54)

DTS-HD High Resolution Audio is a new technology developed for the next generation high definition optical disc format.

DTS-HD Master Audio (page 54)

DTS-HD Master Audio is a lossless audio compression technology developed for the next generation high definition optical disc format.

DTS-HD Master Audio | Essential

DTS-HD Master Audio | Essential is a lossless audio compression technology developed for the next generation high definition optical disc format.

DVD upscaling (page 25)

Upscaling (upconverting) refers to a function of various players and devices that enlarge the image size to fit the size of the screen of video equipments such as a TV.

DVD video (pages 9, 25)

A disc format that contains up to eight hours of moving pictures on a disc the same diameter as a CD. A single-layer single sided DVD holds up to 4.7 GB; a double layer single-sided DVD, 8.5 GB; a single layer double-sided DVD, 9.4 GB; double-layer double-sided DVD, 17 GB. The MPEG 2 format was adopted for efficient video data compression. It is a variable rate technology that encodes the data to according to the status of the video for reproducing high-quality images. Audio information is recorded in a multi-channel format such as Dolby Digital, allowing for a realistic audio presence.

DVD+/-R (pages 9, 25)

A DVD+/-R is a recordable, write-once DVD. Since contents can be recorded and cannot be overwritten, a DVD+/-R can be used to archive data or for storing and distributing video material. The DVD+/-R has two different formats: VR format and Video format. DVDs created in Video format have the same format as a DVD video, while discs created in VR (Video Recording) format allow the contents to be programmed or edited.

DVD+/-RW (pages 9, 25)

A DVD+/-RW is a recordable and rewritable DVD. The re-recordable feature makes editing possible. The DVD+/-RW has two different formats: VR format and Video format. DVDs created in Video format have the same format as a DVD video, while discs created in VR (Video Recording) format allow the contents to be programmed or edited.

HDMI (page 16)

HDMI (High-Definition Multimedia Interface) is an interface that supports both video and audio on a single digital connection. The HDMI connection carries standard to high definition video signals and multi-channel audio signals to AV components such as HDMI equipped TVs, in digital form without degradation.

Interlace format

Interlace format shows every other line of an image as a single "field" and is the standard method for displaying images on television. The even numbered field shows the even numbered lines of an image, and the odd numbered field shows the odd numbered lines of an image.

JPEG (pages 9–11, 35, 36)

JPEG (Joint Photographic Experts Group) is a still image data compression format and is used in most of digital cameras.

Linear PCM Sound

Linear PCM is a signal recording format used for Audio CDs and on some DVD and Blu-ray discs. The sound on Audio CDs is recorded at 44.1 kHz with 16 bits. (Sound is recorded between 48 kHz with 16 bits and 96 kHz with 24 bits on DVD video discs and between 48 kHz with 16 bits and 192 kHz with 24 bits on BD video discs.)

MP3 (pages 9–11, 34, 36)

MP3 files are audio data compressed in the MPEG1/2 Audio layer-3 file format. "MP3 files" have ".mp3" as extensions.

MPEG-2

MPEG-2 (Moving Picture Experts Group phase 2) is one of the video data compression schemes, which is adopted for DVD videos and digital broadcasts worldwide. Some Blu-ray Discs also use high bitrate MPEG-2.

Multi Angle (pages 39–41)

This is a feature of DVD and BD video discs. In some discs, the same scene is shot from different angles, and these are stored in a single disc so you can enjoy playback from each angle. (This function can be enjoyed if the disc is recorded with multiple angles.)

Multi Audio

This is a feature of DVD and BD video discs. This function makes it possible to record different audio tracks for the same video, so you can enhance your enjoyment by switching the audio. (You can enjoy this function with discs recorded with multiple audio tracks.)

Parental control (page 46)

In some digital broadcasts and BD/DVD video discs, a control level for disc viewing is set depending on the age of the viewer. With this player, you can set the control level for viewing such broadcasts and discs.

Pop-up menu (page 27)

An enhanced menu operation available on BD video discs. The pop-up menu appears when **POP-UP MENU** is pressed during playback, and can be operated while playback is in progress.

Progressive format

Compared to the Interlace format that alternately shows every other line of an image (field) to create one frame, the Progressive format shows the entire image at once as a single frame. This means that while the Interlace format can show 30 frames/60 fields in one second, the Progressive format can show 60 frames in one second. The overall picture quality increases and still images, text, and horizontal lines appear sharper.

Region code (page 9)

Code identifying a geographic region of compatibility for a BD/DVD.

Resume playback (page 25)

If you stop playback while it is in progress, the player stores the stop position in memory, and this function lets you playback from that point.

Skip (pages 34, 35, 37)

This returns to the start of the chapter (or track) being played, or skips to the next chapter (or track).

Subtitles (pages 39–41)

These are the lines of text appearing at the bottom of the screen which translate or transcribe the dialogue. They are recorded on many DVD and BD video discs.

Time number

This indicates the play time which has elapsed from the start of a disc or a title. It can be used to find a specific scene quickly. (It may not work with some discs.)

Title number (pages 40, 41)

These numbers are recorded on DVD and Blu-ray discs. When a disc contains two or more movies, these movies are numbered as title 1, title 2, etc.

Top menu (page 26)

In a BD/DVD video, this is the menu for selecting things like the chapter to be played back and the subtitle language. In some DVD videos, the top menu may be called the "Title Menu".

Track number (pages 40, 41)

These numbers are assigned to the tracks which are recorded on audio CDs. They enable specific tracks to be located quickly.

x.v.Colour

x.v.Colour reproduces a greater range of colour than before, showing almost all of the colours that the human eye can detect. (Applicable for JPEG files only with this system)

YouTube (page 55)

YouTube is a website where users can upload and view video content, such as video clips and TV clips. You can watch the content streamed on your TV.

Network Service Disclaimer

This Sharp device facilitates the access to content and services provided by third parties. The content and services accessible via this device belong to and may be proprietary to third parties. Therefore, any use of such third party content and services must be in accordance with any authorisation or terms of use provided by such content or service provider. Sharp shall not be liable to you or any third party for your failure to abide by such authorisation or terms of use. Unless otherwise specifically authorised by the applicable content or service provider, all third party content and services provided are for personal and non-commercial use; you may not modify, copy, distribute, transmit, display, perform, reproduce, upload, publish, license, create derivative works from, transfer or sell in any manner or medium any content or services available via this device.

Sharp is not responsible, nor liable, for customer service-related issues related to the third party content or services. Any questions, comments or service-related inquiries relating to the third party content or service should be made directly to the applicable content or service provider.

You may not be able to access content or services from the device for a variety of reasons which may be unrelated to the device itself, including, but not limited to, power failure, other Internet connection, or failure to configure your device properly. Sharp, its directors, officers, employees, agents, contractors and affiliates shall not be liable to you or any third party with respect to such failures or maintenance outages, regardless of cause or whether or not it could have been avoided.

ALL THIRD PARTY CONTENT OR SERVICES ACCESSIBLE VIA THIS DEVICE IS PROVIDED TO YOU ON AN “AS-IS” AND “AS AVAILABLE” BASIS AND SHARP AND ITS AFFILIATES MAKE NO WARRANTY OR REPRESENTATION OF ANY KIND TO YOU, EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE OR ANY WARRANTIES OF SUITABILITY, AVAILABILITY, ACCURACY, COMPLETENESS, SECURITY, TITLE, USEFULNESS, LACK OF NEGLIGENCE OR ERROR-FREE OR UNINTERRUPTED OPERATION OR USE OF THE CONTENT OR SERVICES PROVIDED TO YOU OR THAT THE CONTENT OR SERVICES WILL MEET YOUR REQUIREMENTS OR EXPECTATIONS.

SHARP IS NOT AN AGENT OF AND ASSUMES NO RESPONSIBILITY FOR THE ACTS OR OMISSIONS OF THIRD PARTY CONTENT OR SERVICE PROVIDERS, NOR ANY ASPECT OF THE CONTENT OR SERVICE RELATED TO SUCH THIRD PARTY PROVIDERS.

IN NO EVENT WILL SHARP AND/OR ITS AFFILIATES BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, CONSEQUENTIAL OR OTHER DAMAGES, WHETHER THE THEORY OF LIABILITY IS BASED ON CONTRACT, TORT, NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR OTHERWISE AND WHETHER OR NOT SHARP AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

About Software License

Information on the Software License for This Product

Software composition

The software included in this product is comprised of various software components whose individual copyrights are held by SHARP or by third parties.

Software developed by SHARP and open source software

The copyrights for the software components and various relevant documents included with this product that were developed or written by SHARP are owned by SHARP and are protected by the Copyright Act, international treaties, and other relevant laws. This product also makes use of freely distributed software and software components whose copyrights are held by third parties. These include software components covered by a GNU General Public License (hereafter GPL), a GNU Lesser General Public License (hereafter LGPL) or other license agreement.

Obtaining source code

Some of the open source software licensors require the distributor to provide the source code with the executable software components. GPL and LGPL include similar requirements. For information on obtaining the source code for the open source software and for obtaining the GPL, LGPL, and other license agreement information, visit the following website:

<http://www.sharp-eu.com/gpl>

We are unable to answer any questions about the source code for the open source software. The source code for the software components whose copyrights are held by SHARP is not distributed.

Acknowledgements

The following open source software components are included in this product:

- LibPThread • Librt • libsoup • Libstdc++ • libxml2 • OpenSSL • pango • swfdec • Webkit • zlib • linux kernel • uClibc • modutils • NanoXML
- org.apache.oro.text.regex • libsysfs • mtd/jffs2 • ncurses • libiconv • libusb • busybox • bash • libmpeg2 • libjpeg • FontConfig • ntf3-3g
- liboil • libgnutls • libgpg-error • libtasn1 • pixman • gstreamer • libgcrypt

Software License Notice

Software License Notice Requirements

The software components incorporated into this product include components whose copyright holders require license notices. The license notices for these software components are shown below.

OpenSSL License

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org>)

Original SSLeay License

This product includes cryptographic software written by Eric Young (ey@cryptsoft.com).

BSD License

This product includes software developed by the University of California, Berkeley and its contributors.



<ORC9079-A>



Printed in China
TINSEA194WJQZ
12P04-CH-NG